



Cantonese,
Mandarin
& English
Sound Book
USER GUIDE

**Cantonese
Mandarin
& English**

BUTTONS



Activate the Page



Play Music Tracks



Auto-Reads all Words on the Page



Question & Answer Mode



Adjust Volume +/-




Switch Language to Chinese/English

PRESS THIS FIRST ON EACH PAGE



HOW TO START

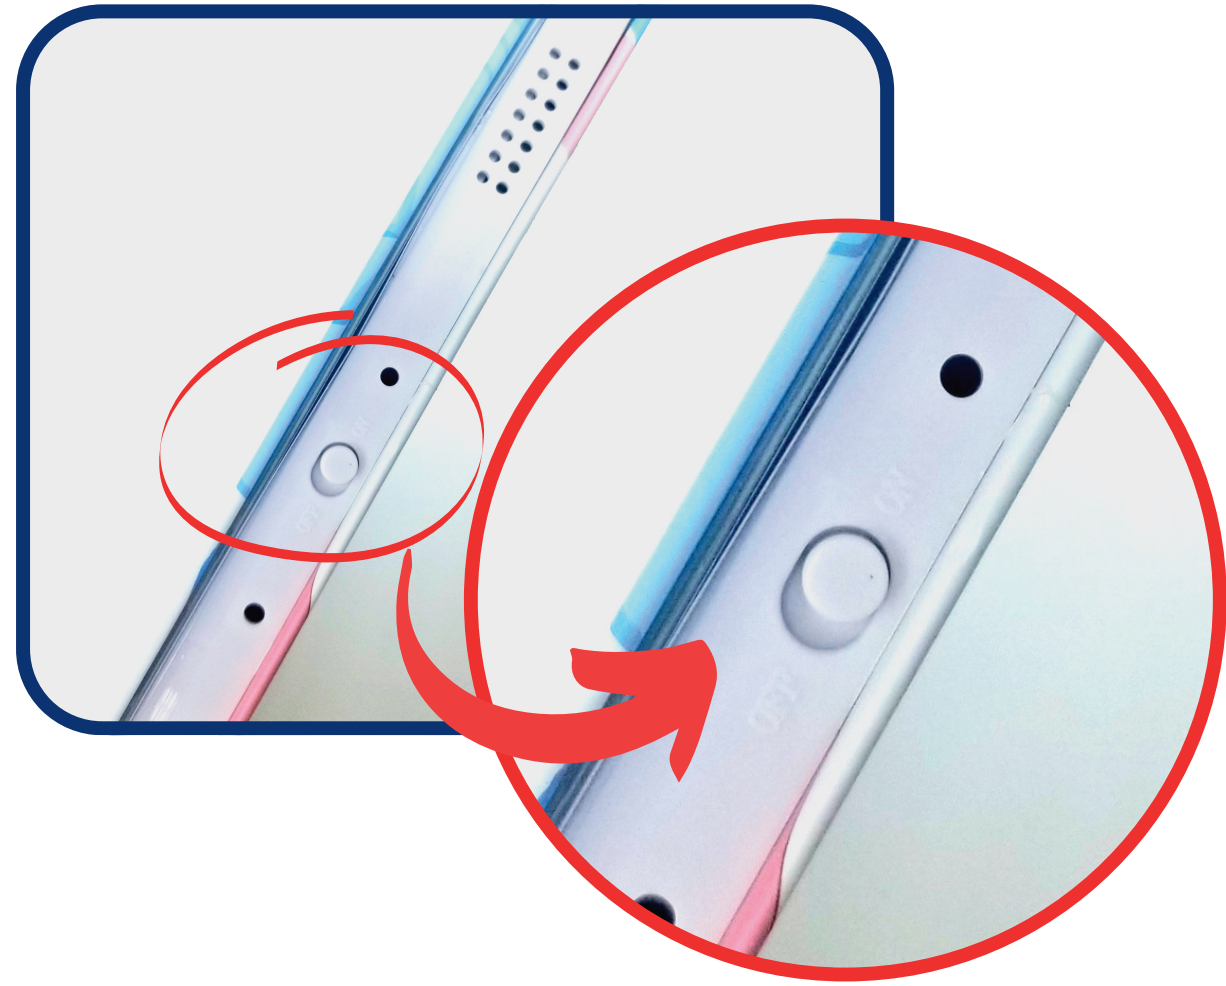

1. Switch the button to turn on/ off.



IMPORTANT!

2. Tap the "GO" button on each page before starting.



3. Firmly press the graphics to play the audio.



4. Press the switch button to change the language between Chinese and English.

BATTERY

! Requires 3 AAA batteries (not included).

REMINDER!

If you hear any sound defects or irregularities, it's time to replace the batteries. Fresh batteries ensure the best performance.

