



Cantonese, Mandarin & English Sound Book USER GUIDE

BUTTONS



Activate
the Page



Play Music
Tracks



Auto-Reads
all Words on
the Page



Question &
Answer
Mode



Adjust
Volume +/-




Switch
Language to
Chinese/
English

PRESS THIS
FIRST ON
EACH PAGE



HOW TO START

1. Switch the button to turn on/ off.

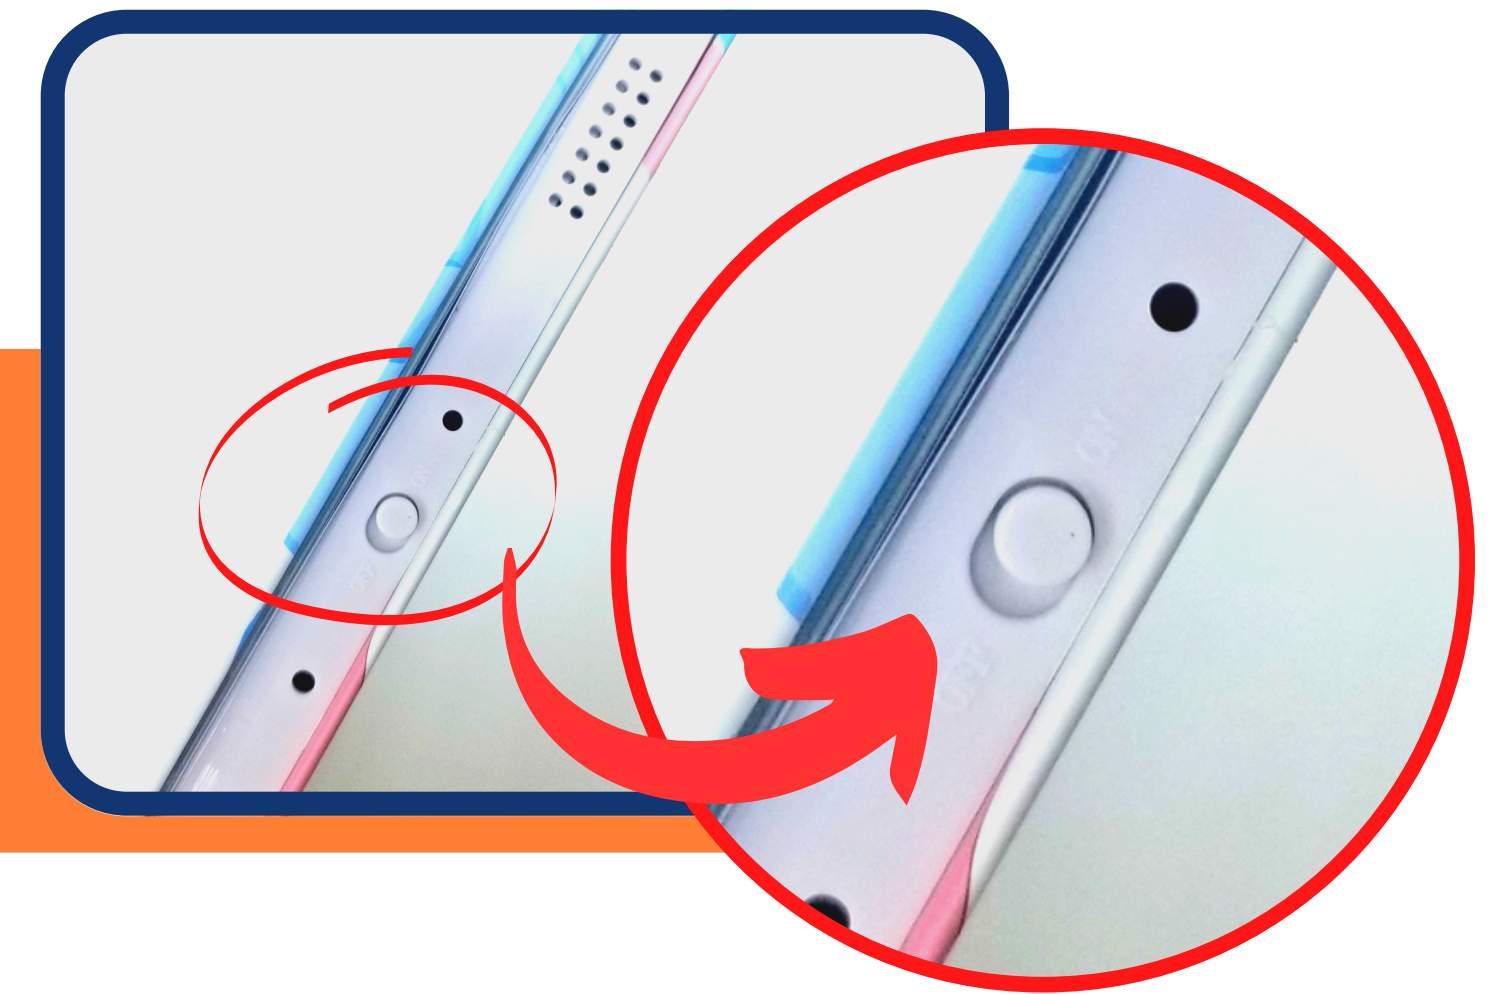

2. Tap **'GO'** on **each page** to start. Otherwise the last sound will just repeat.

! IMPORTANT

2. Firmly press the graphics on the box to hear the audio.



3. Press the language button to switch between Chinese and English.

BATTERY



Requires 3 AAA
batteries (not included).



Replace the batteries if you hear any sound defects. Fresh batteries ensure the best performance.