

# French & English Sound Book USER GUIDE



# BUTTONS

GO

Activate  
the Page

Music

Play Music  
Tracks

Read

Auto-Reads  
all Words on  
the Page

Quiz

Question &  
Answer  
Mode

Vol

Adjust  
Volume +/-

Switch

Switch  
Language to  
French/ English

PRESS THIS  
FIRST ON  
EACH PAGE

GO




Music

Read

Quiz

Vol


Switch

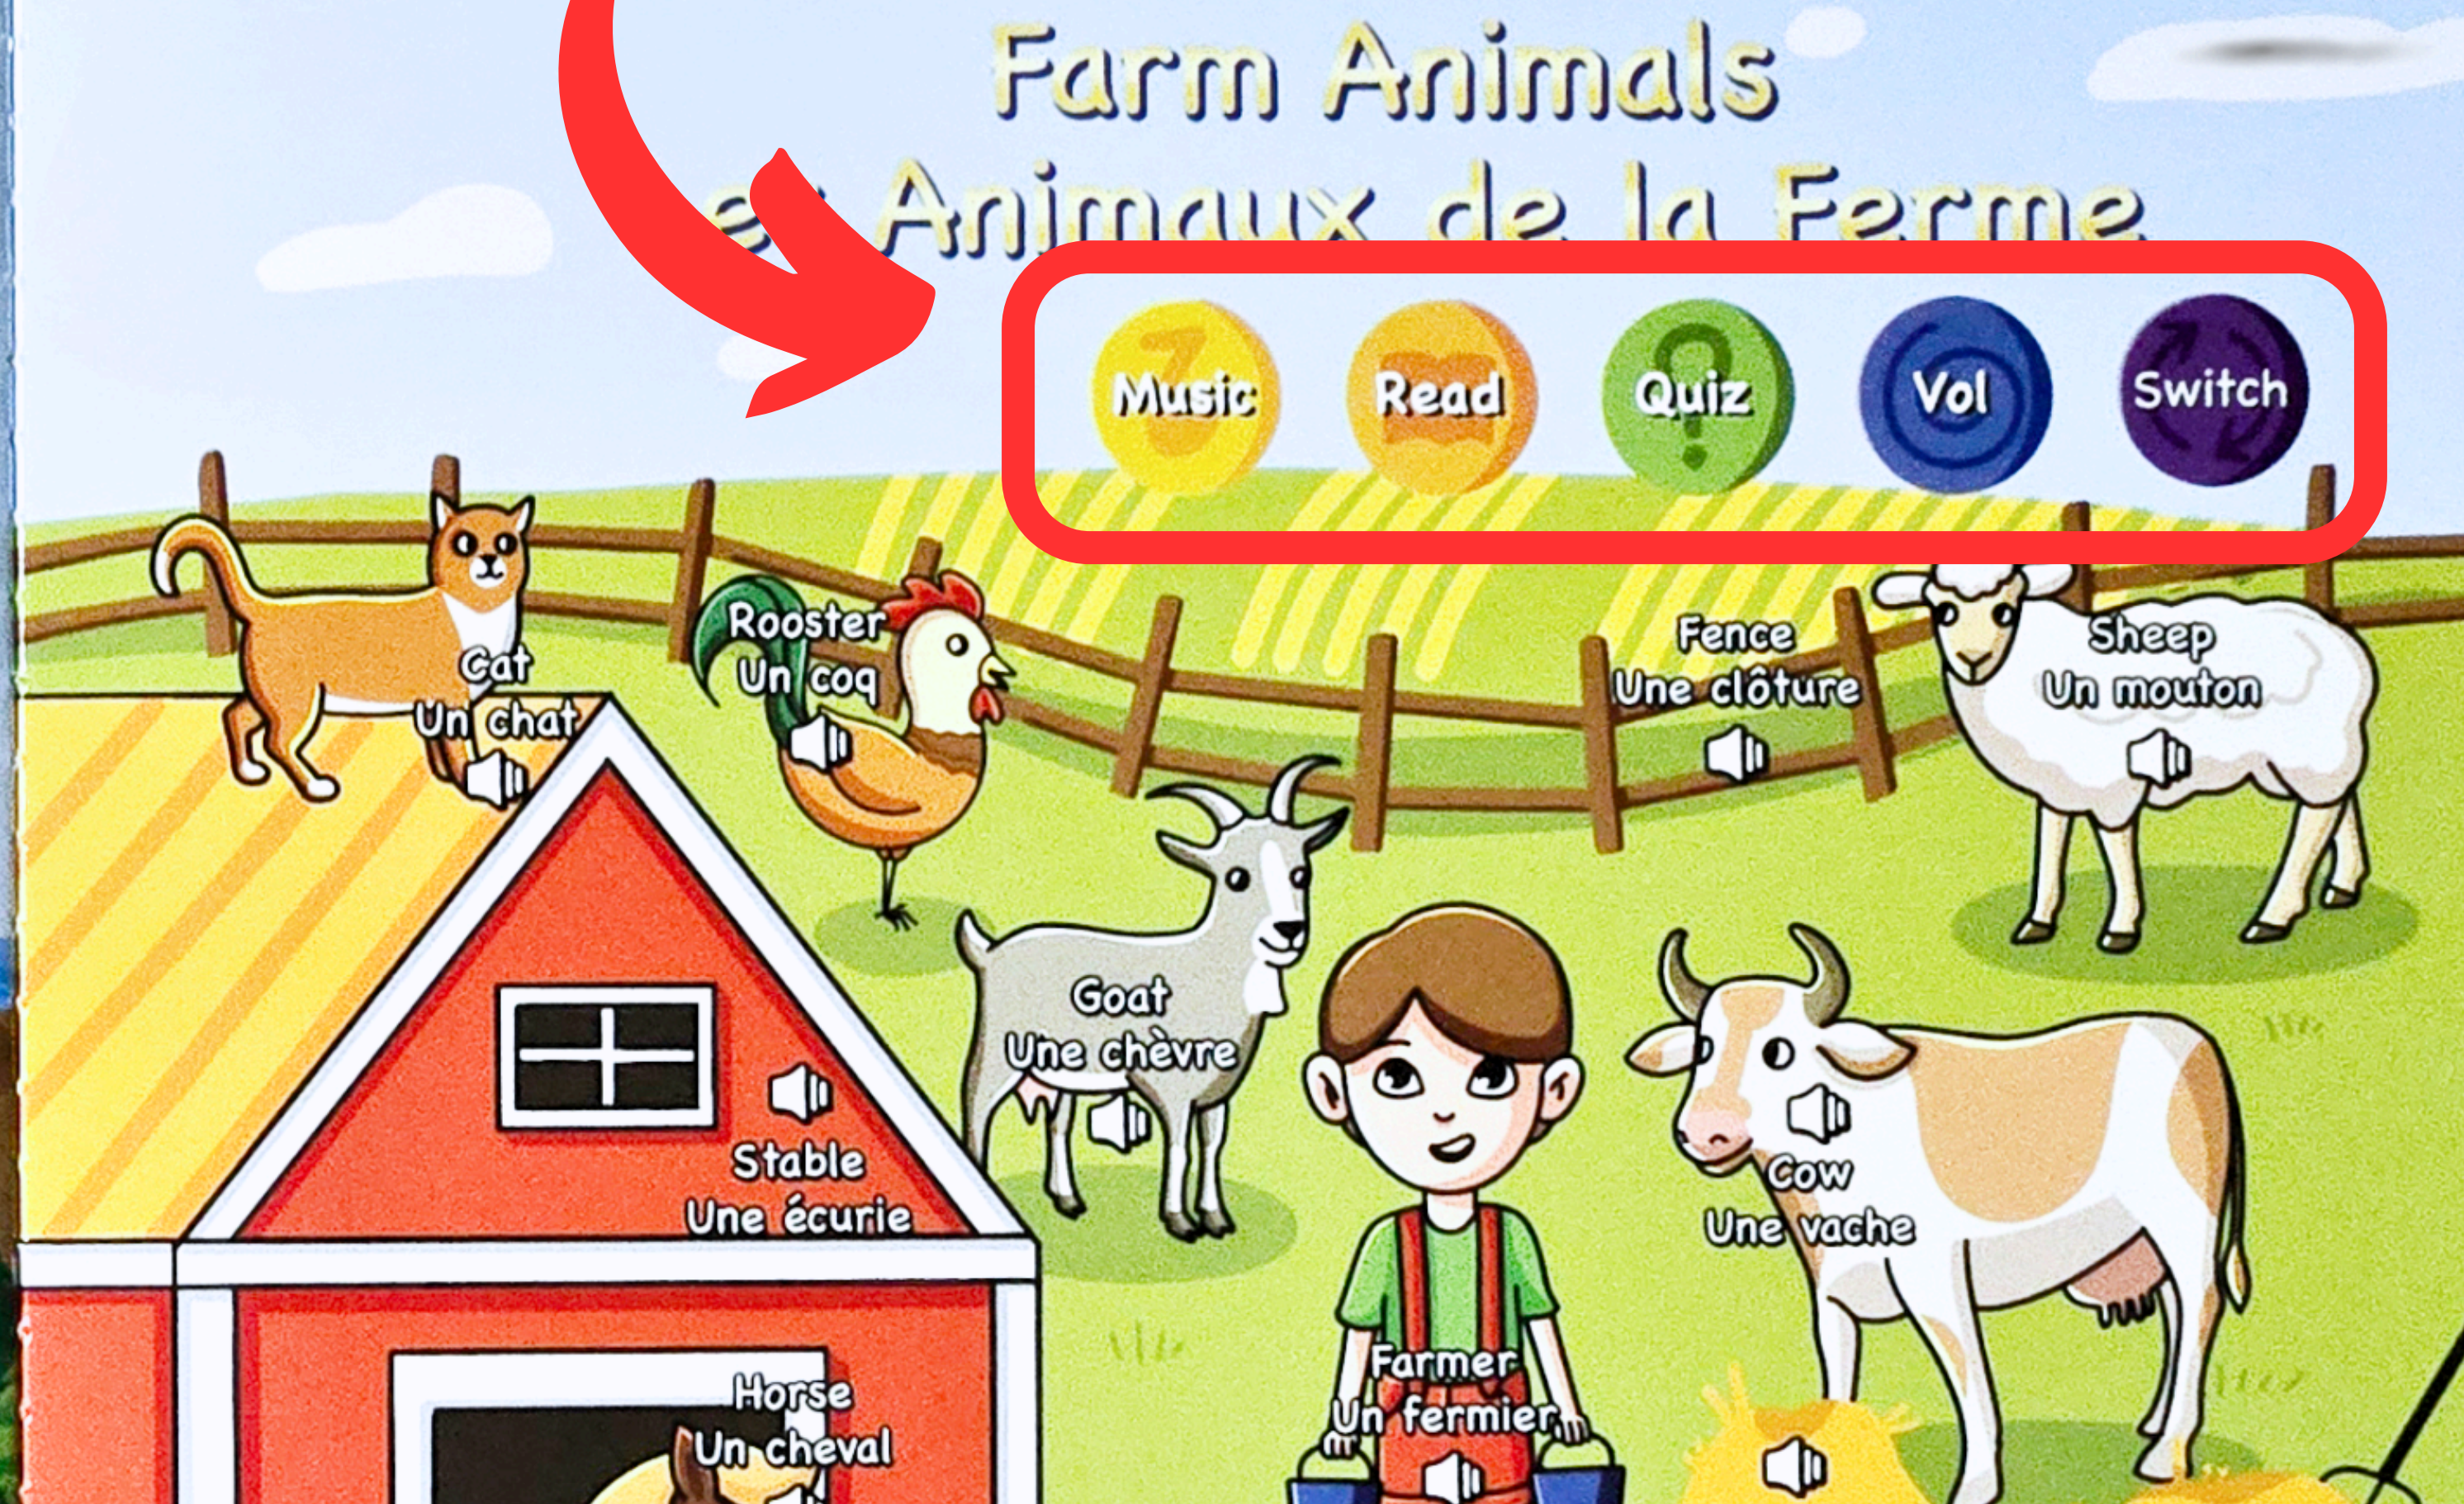



# HOW TO START

1. Switch the button to turn on/ off.

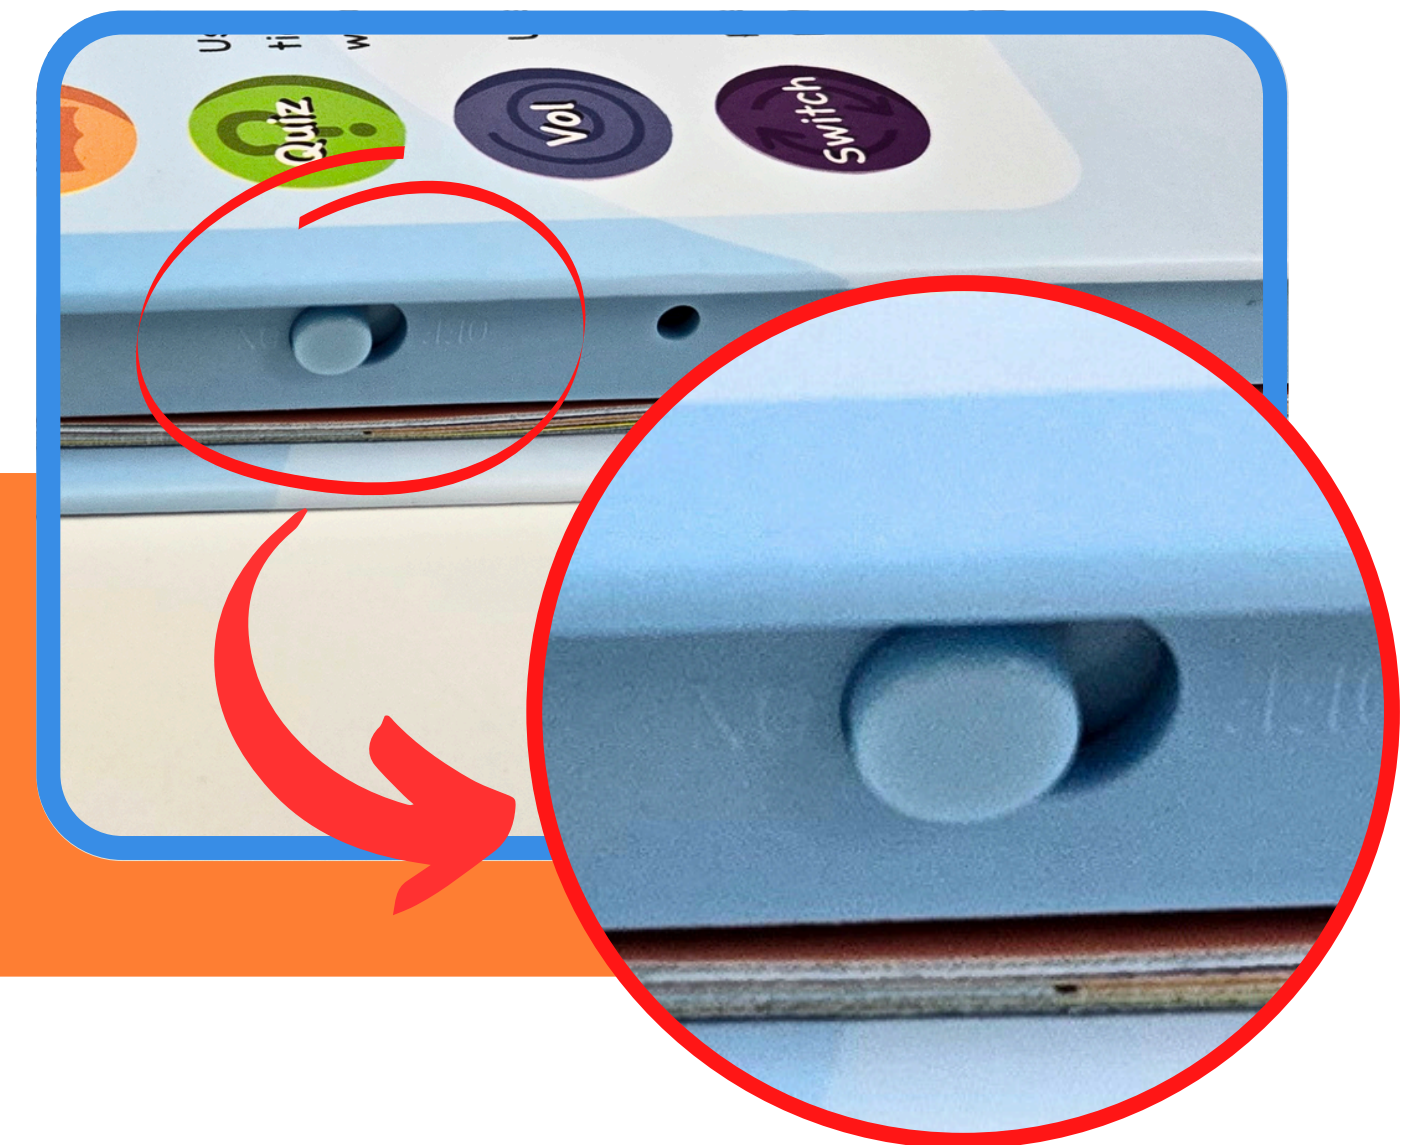

GO

2. Tap **'GO'** on **each page** to start.  
Otherwise the last sound will just repeat.

**! IMPORTANT**

2. Firmly press the graphics on the box to hear the audio.



Switch

3. Press the language button to switch between French and English.



# BATTERY



Requires 3 AAA  
batteries (not included).



Replace the batteries if you hear any  
sound defects. Fresh batteries ensure the  
best performance.