



# Spanish & English Sound Book USER GUIDE



# BUTTONS

GO

Activate  
the Page

MUSIC

Play Music  
Tracks

READ

Auto-Reads  
all Words on  
the Page

QUIZ

Question &  
Answer  
Mode

VOL

Adjust  
Volume +/-

SPANISH



INGLES

Switch  
Language to  
French/ English

PRESS THIS  
FIRST ON  
EACH PAGE

GO





20



# HOW TO START

1. Switch the button to turn on/ off.

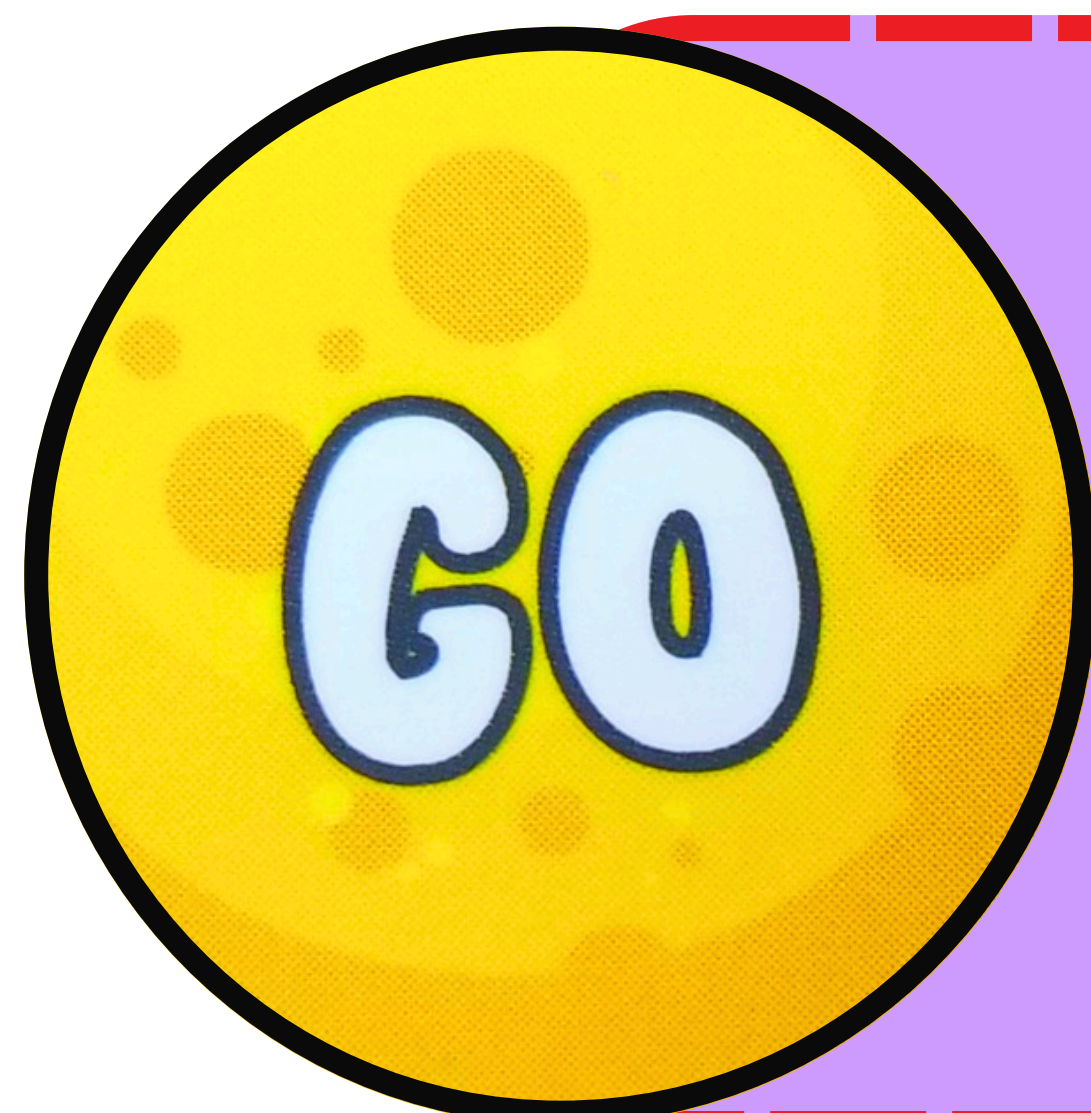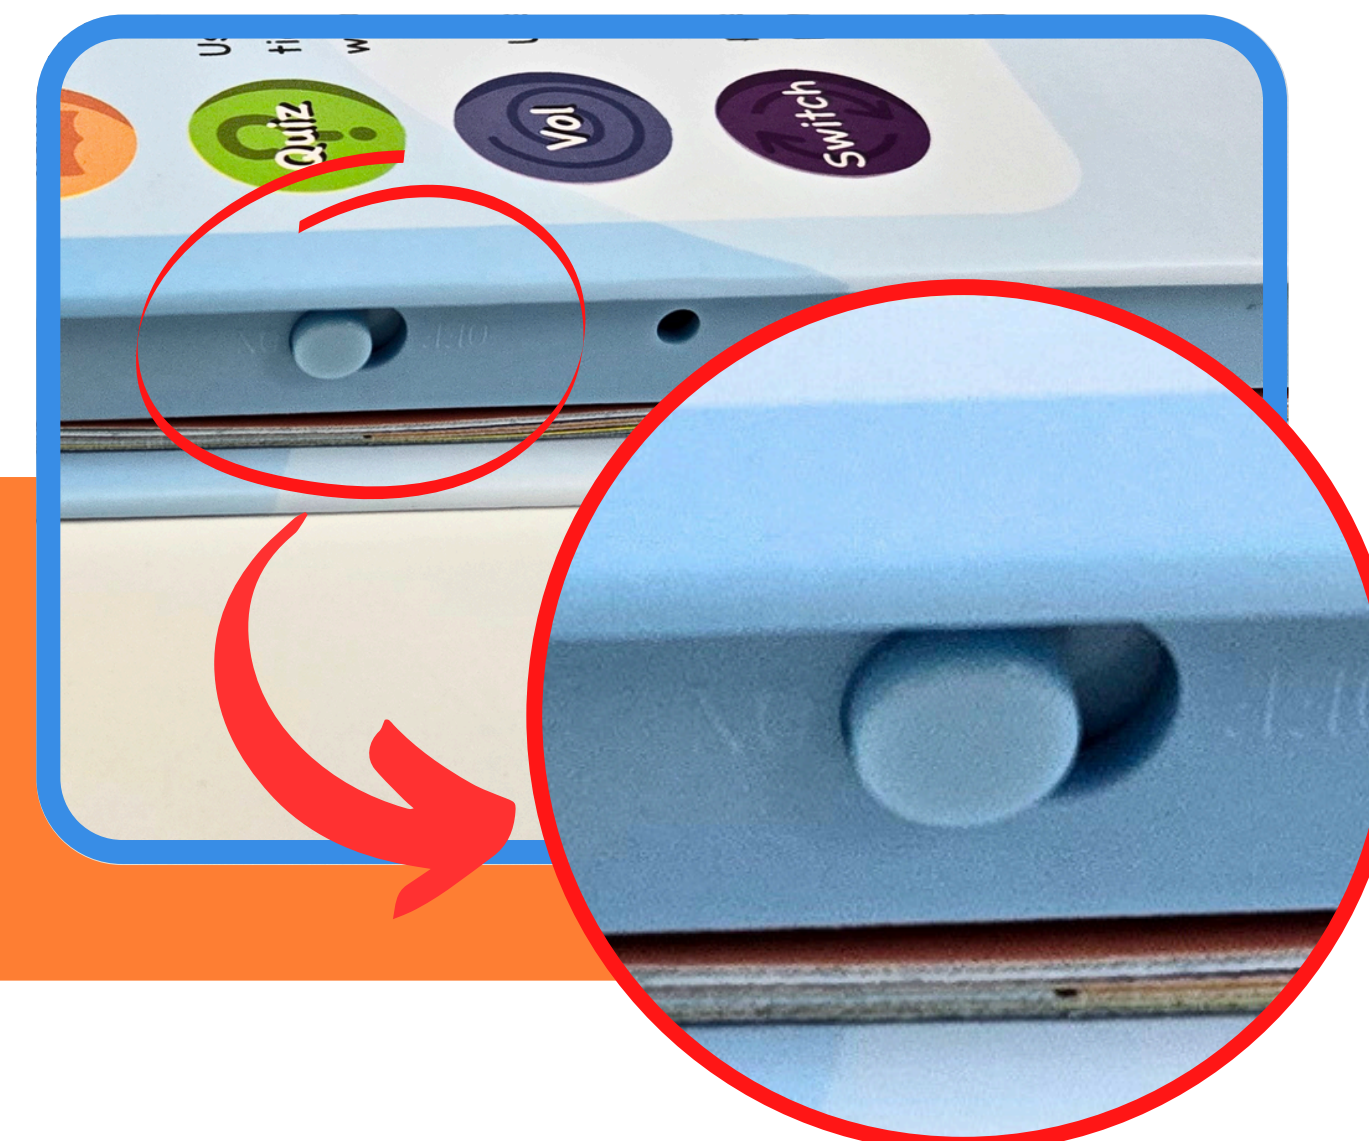

2. Tap **'GO'** on **each page** to start. Otherwise the last sound will just repeat.

**! IMPORTANT**

2. Firmly press the graphics on the box to hear the audio.



3. Press the language button to switch between Spanish and English.



# BATTERY



Requires 3 AAA  
batteries (not included).



Replace the batteries if you hear any  
sound defects. Fresh batteries ensure the  
best performance.