



**English
Nursery Rhymes
Sound Book**

USER GUIDE

BUTTONS



Activate the Page







Voice Recorder



Adjust Volume +/-

Press "GO" first on each page to listen to the music

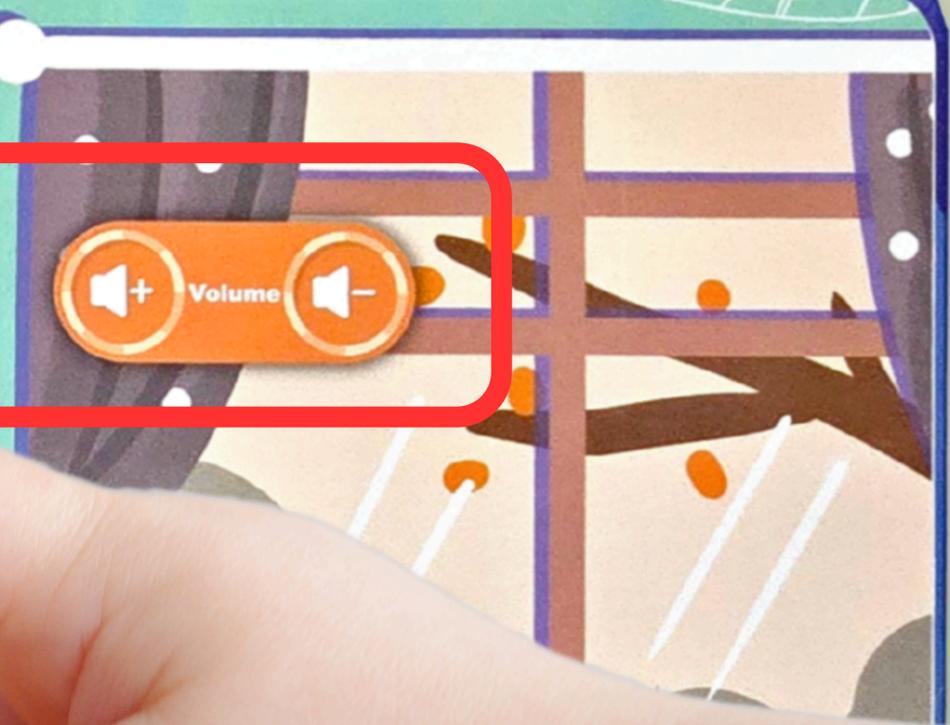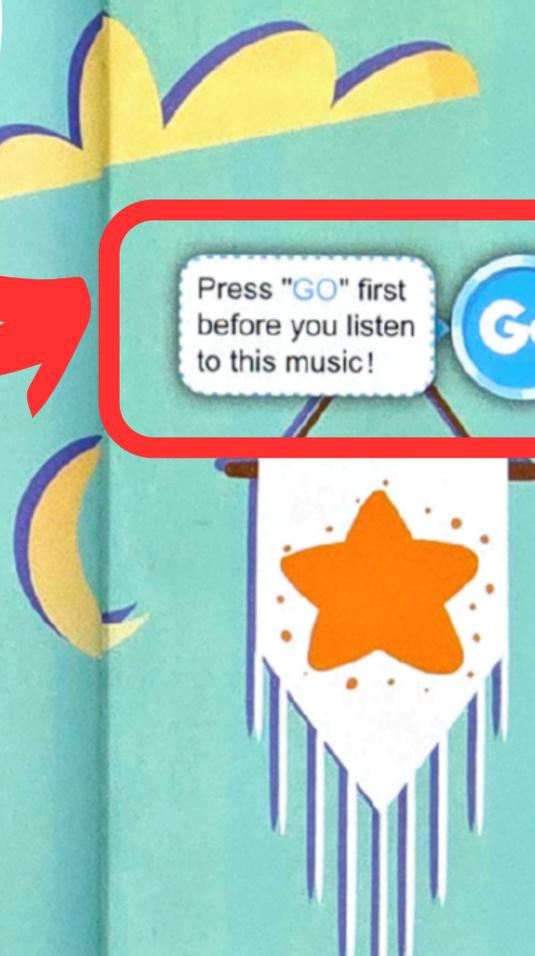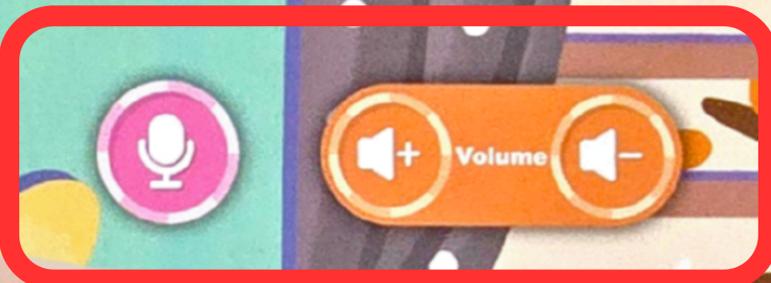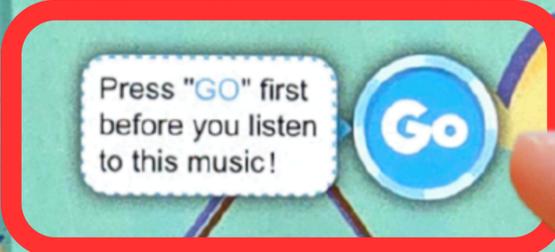

The clock struck
The mouse ran down

HOW TO USE

1. Switch the button to turn on/ off.



GO

2. Press **'GO' each page** to play the music. Otherwise the last music will just repeat.


! IMPORTANT

2. Press record button to record and playback own voice.



3. Adjust the volume to your likeness.

BATTERY

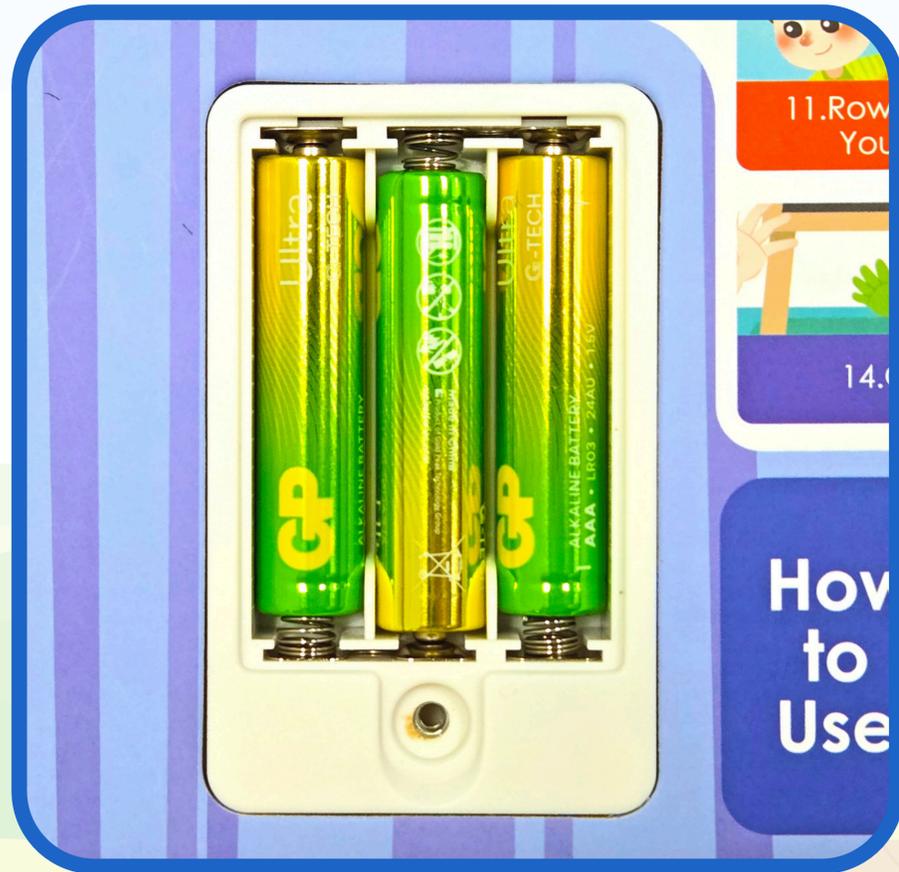

Requires 3 AAA batteries (not included).



Replace the batteries if you hear any sound defects. Fresh batteries ensure the best performance.