



# SPANISH & ENGLISH LAPTOP TOY

# USER GUIDE

# GETTING STARTED



## BATTERY INSTALLATION



- Locate the battery compartment at the bottom
- Install 3 AA batteries **(not included)**



Replace the batteries if you hear any sound defects. Fresh batteries ensure the best performance.



**Picture Chart**  
with Spanish Word

**Interactive Screen**

**Picture Chart**  
with English Word



**Keys**  
Numeric, Letters,  
and Control Keys

**Speaker**

## Step 1: Power On

Press the same key to turn off



## Step 2: Select a Language

Press to choose English or Spanish



## Step 3: Select a Mode

Choose Reading, Spelling, Math, Quiz, or Music Mode




## Step 4: Enjoy the Toy

Press to choose English or Spanish




# LEARNING MODES

## IN SPANISH OR ENGLISH LANGUAGE

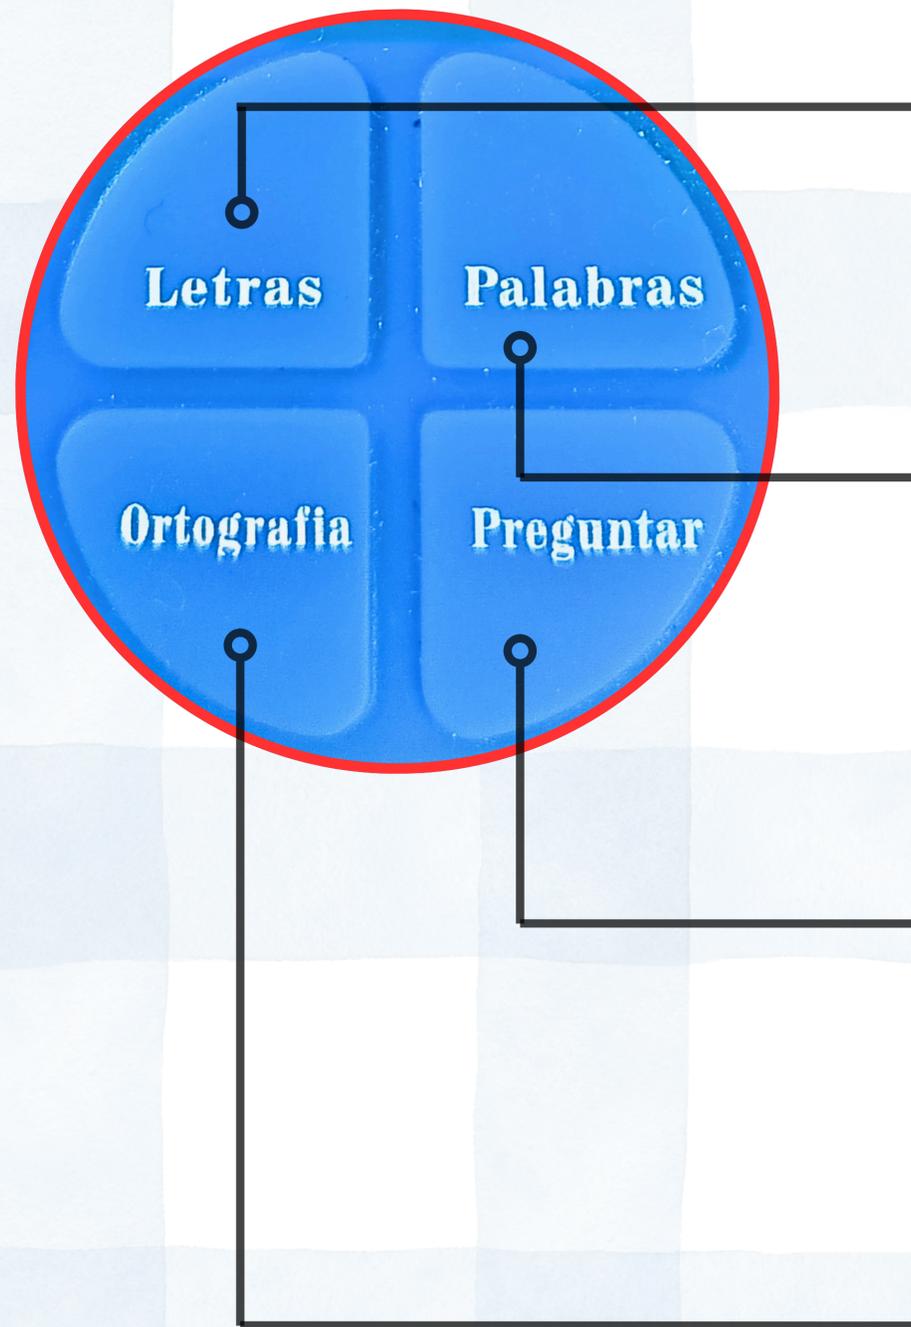

### Alphabet Mode

Reads out letters as you press the letter key

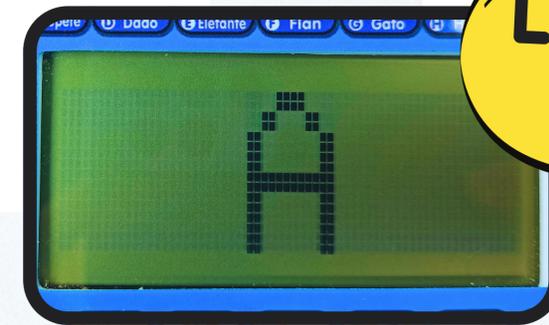

Letter "A"

### Word Mode


Reads out the words from the chart as you press the keys



Apple


### Alphabet Quiz Mode

Find the letter by pressing the correct key

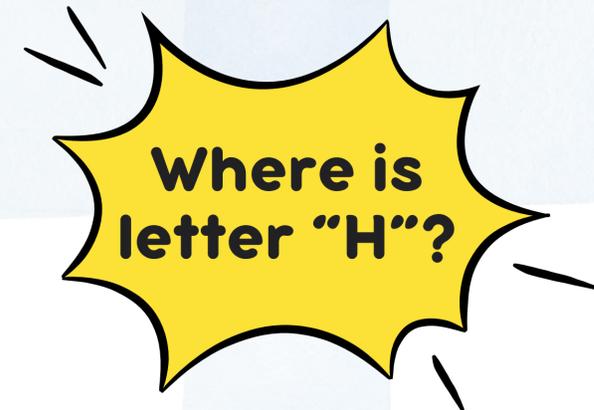

### Spelling Mode


Spells out chart words as you press the letter key

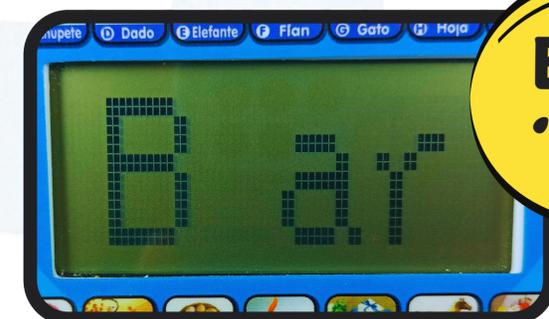

B, A, R  
"BAR"

# QUIZ MODES

IN SPANISH OR ENGLISH LANGUAGE

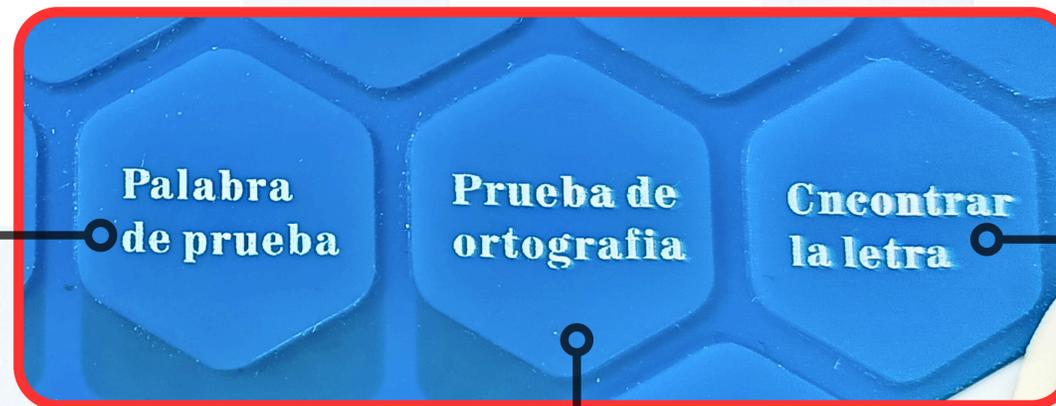

## Word Quiz Mode

Fill in the blank by pressing the correct missing letter



## Find the Letters

Press the letters that appear on the screen




## Spelling Quiz Mode

Spell the given word by pressing the correct letters



## Math Quiz (Ask) Mode

Addition & Subtraction Quiz.  
Press the correct number key

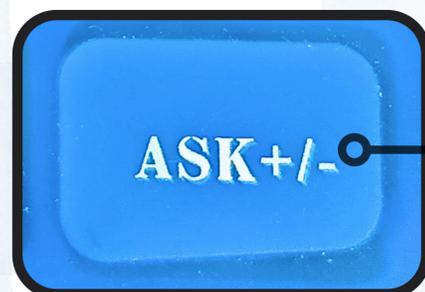

# MUSIC MODE

IN SPANISH & ENGLISH NURSERY RHYMES

## Music Mode

Play the nursery rhymes by pressing the letter or number keys

