



SPANISH & ENGLISH LAPTOP TOY USER GUIDE

GETTING STARTED



BATTERY INSTALLATION

- Locate the battery compartment at the bottom
- Install 3 AA batteries **(not included)**



Replace the batteries if you hear any sound defects. Fresh batteries ensure the best performance.



**Picture Chart
with Spanish Word**

Interactive Screen

**Picture Chart
with English Word**



**Keys
Numeric, Letters,
and Control Keys**

Speaker

Step 1: Power On

Press the same key to turn off




Step 3: Select a Mode

Choose Reading, Spelling, Math, Quiz, or Music Mode



Step 2: Select a Language

Press to choose English or Spanish

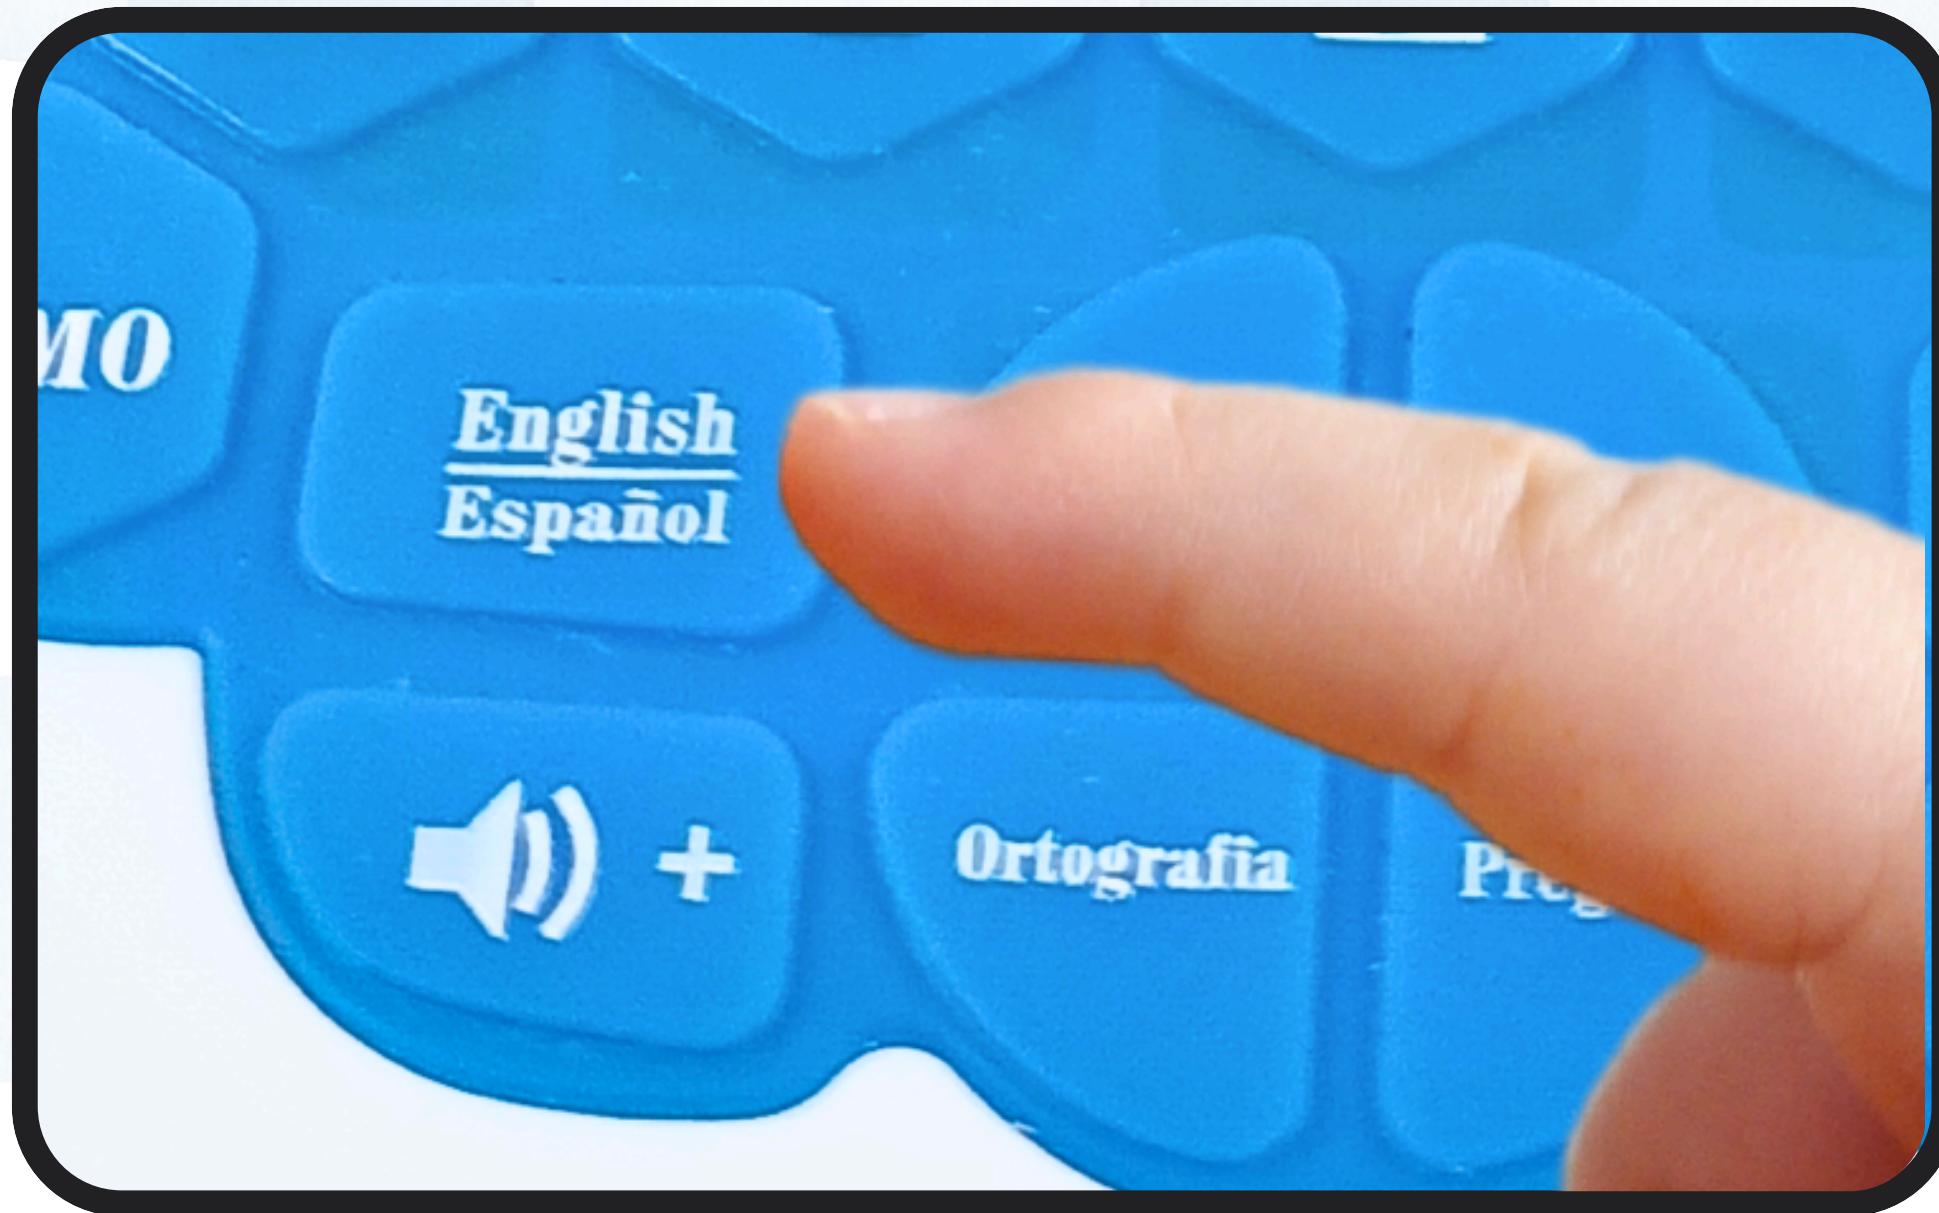


Step 4: Enjoy the Toy

Press to choose English or Spanish




LEARNING MODES

IN SPANISH OR ENGLISH LANGUAGE

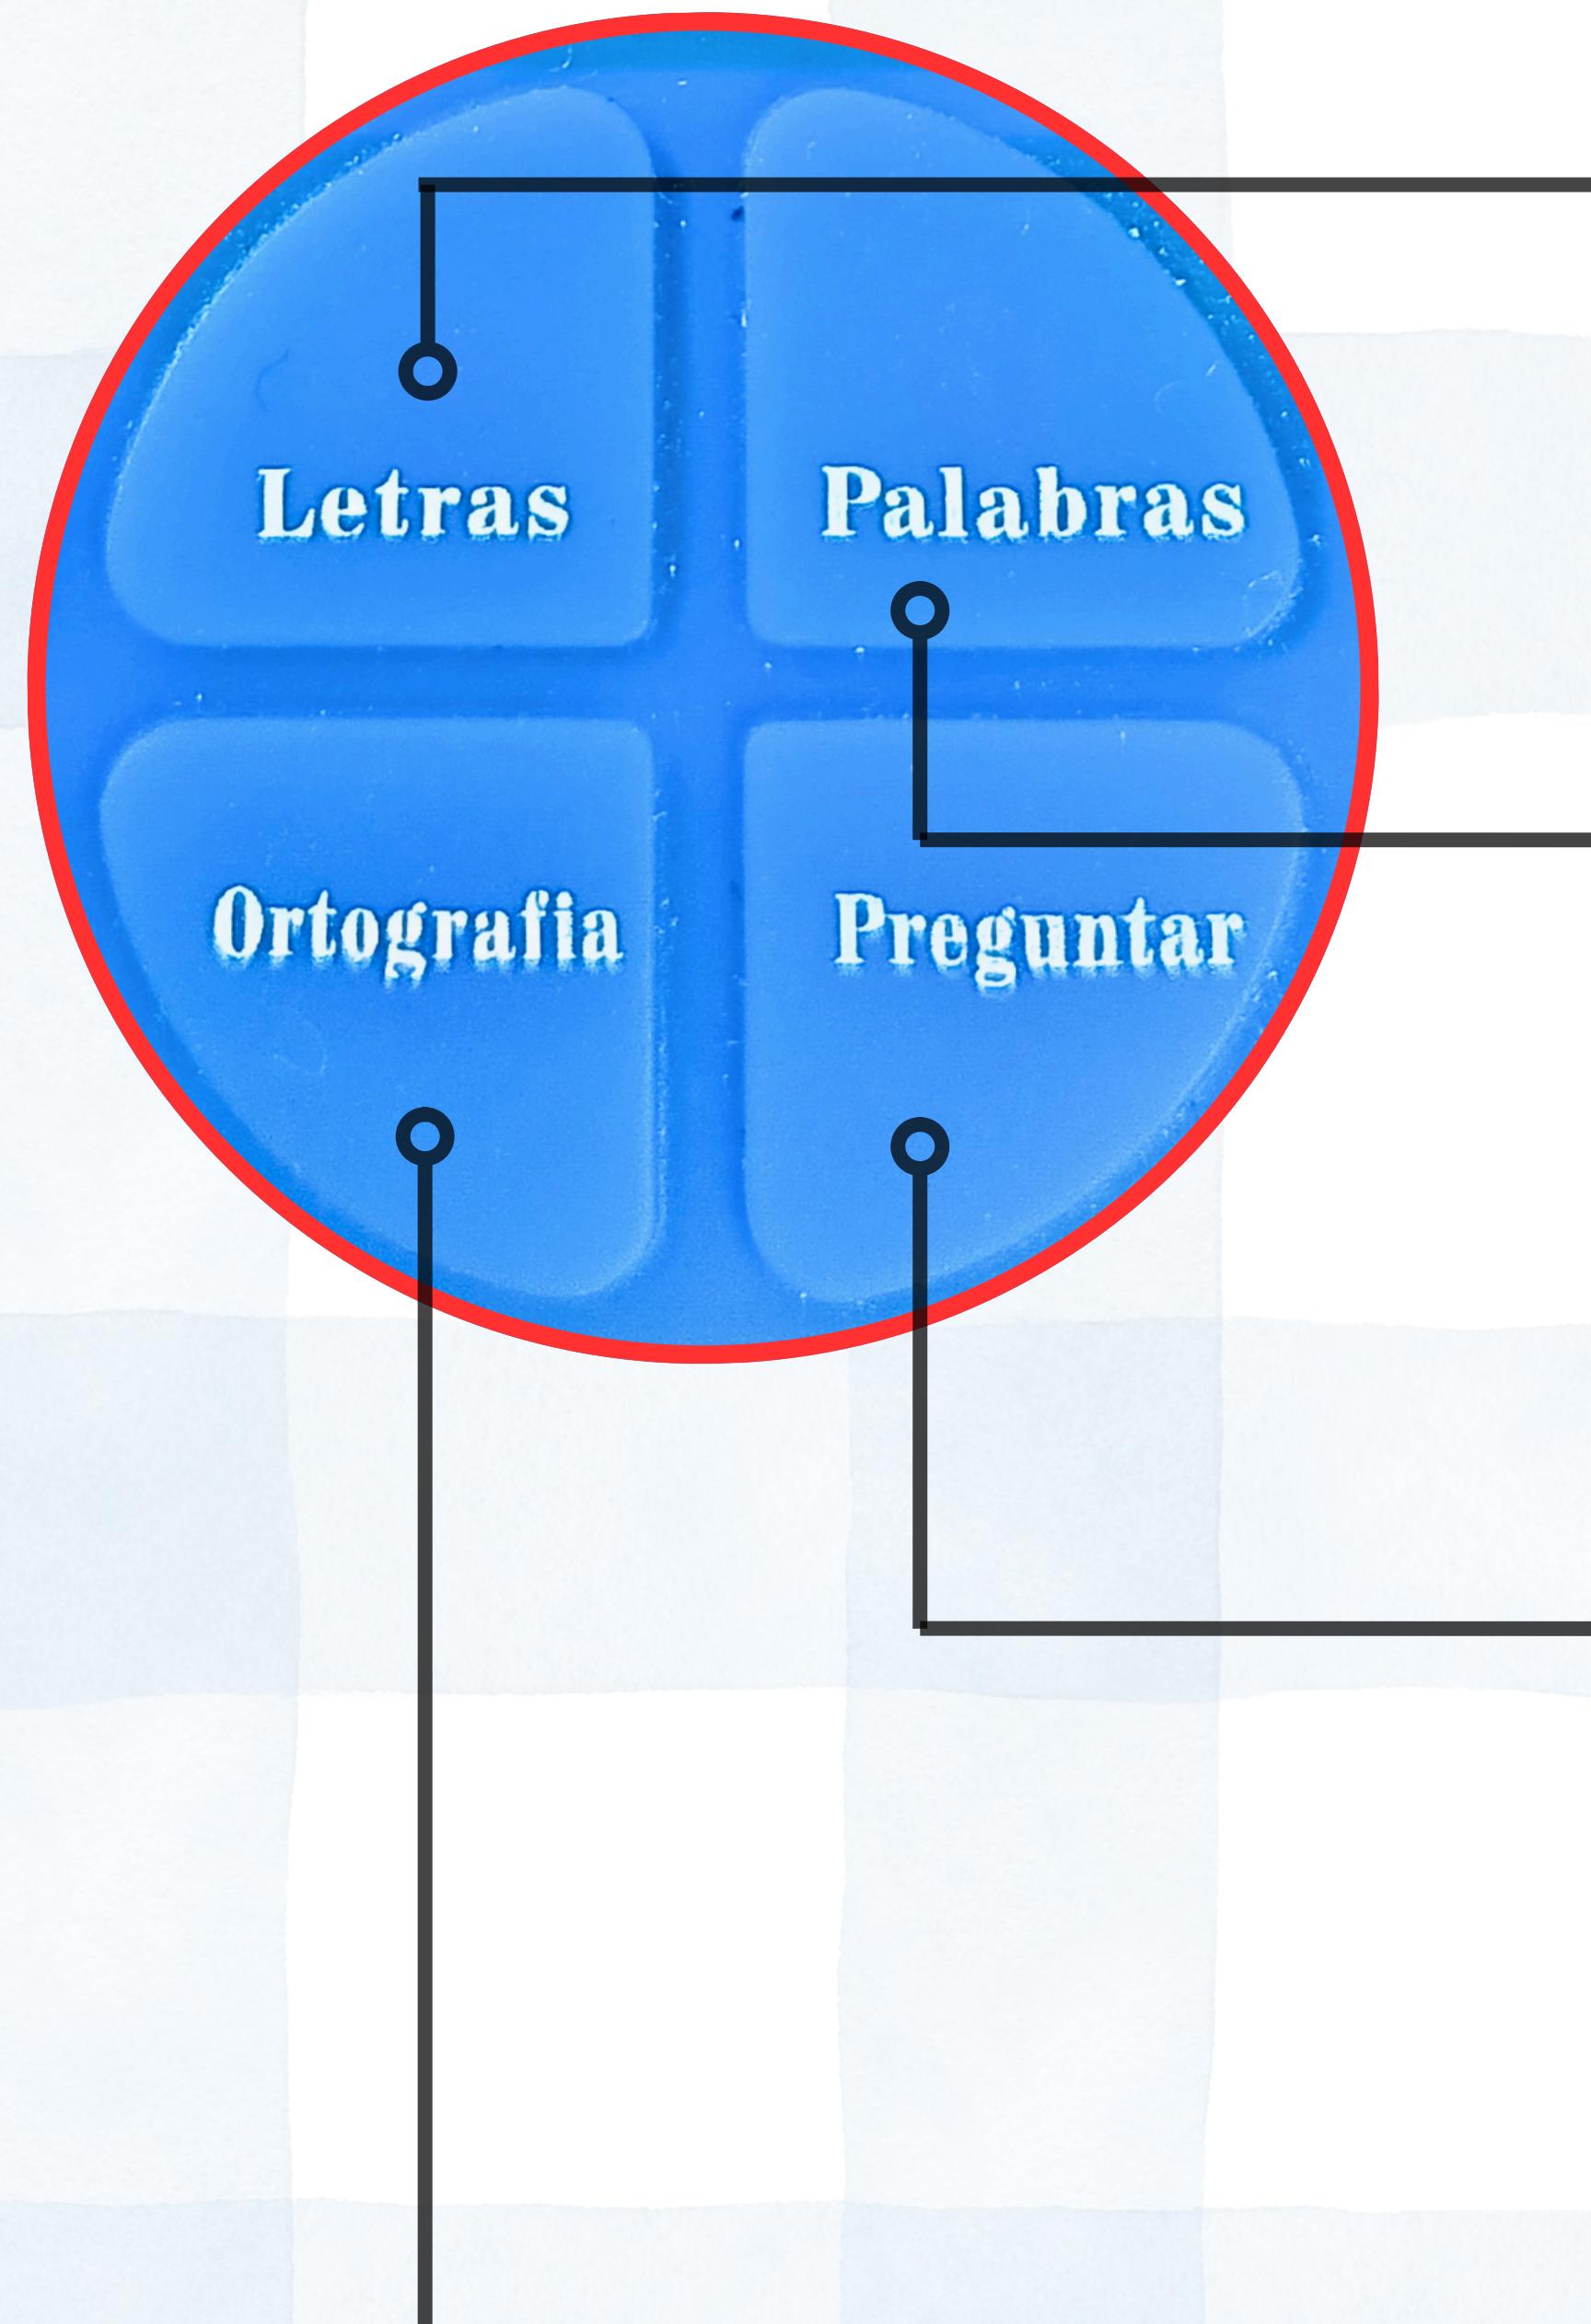

Alphabet Mode

Reads out letters as you press the letter key

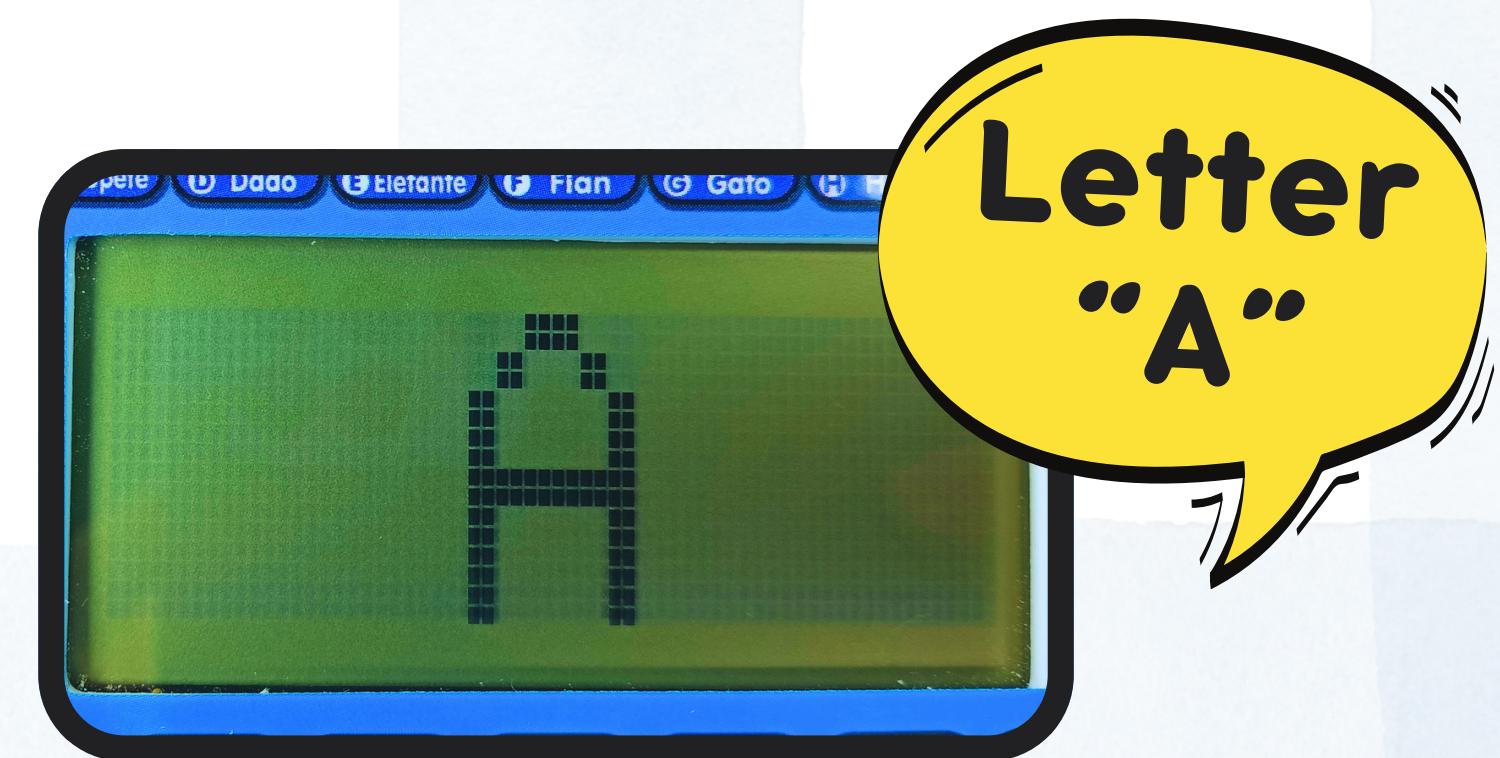

Word Mode

Reads out the words from the chart as you press the keys



Alphabet Quiz Mode

Find the letter by pressing the correct key



Spelling Mode

Spells out chart words as you press the letter key




QUIZ MODES

IN SPANISH OR ENGLISH LANGUAGE


Word Quiz Mode

Fill in the blank by pressing the correct missing letter

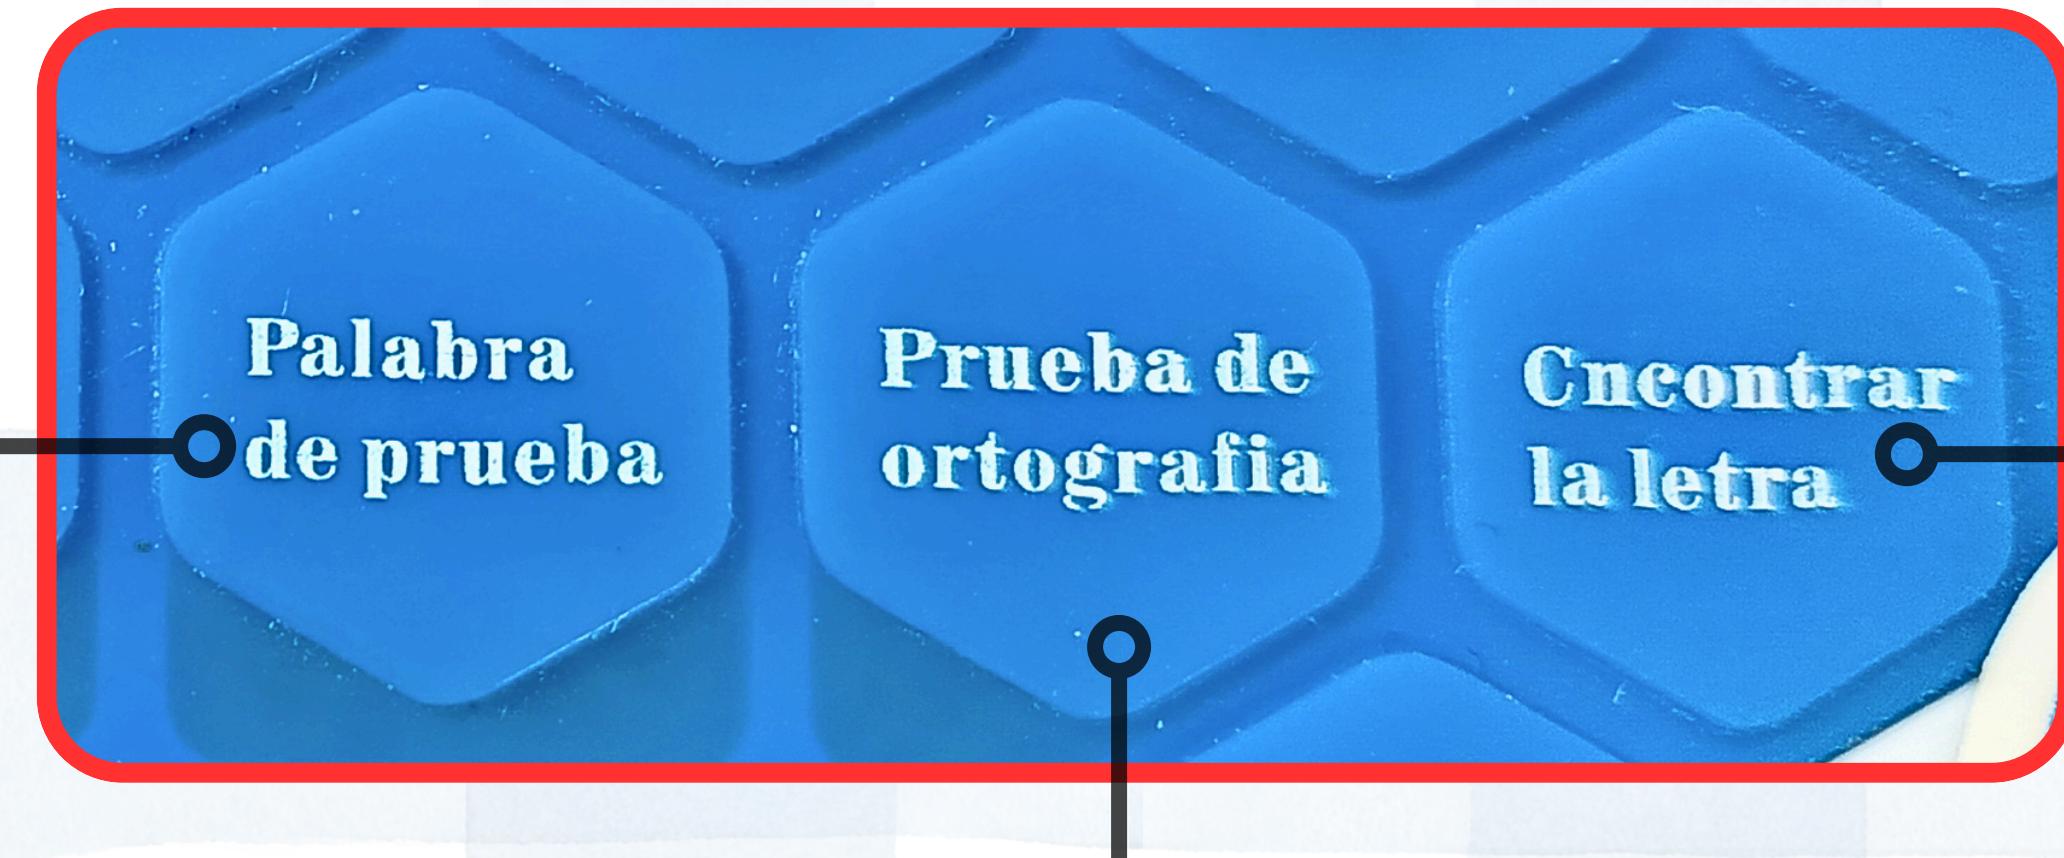



Find the Letters

Press the letters that appear on the screen

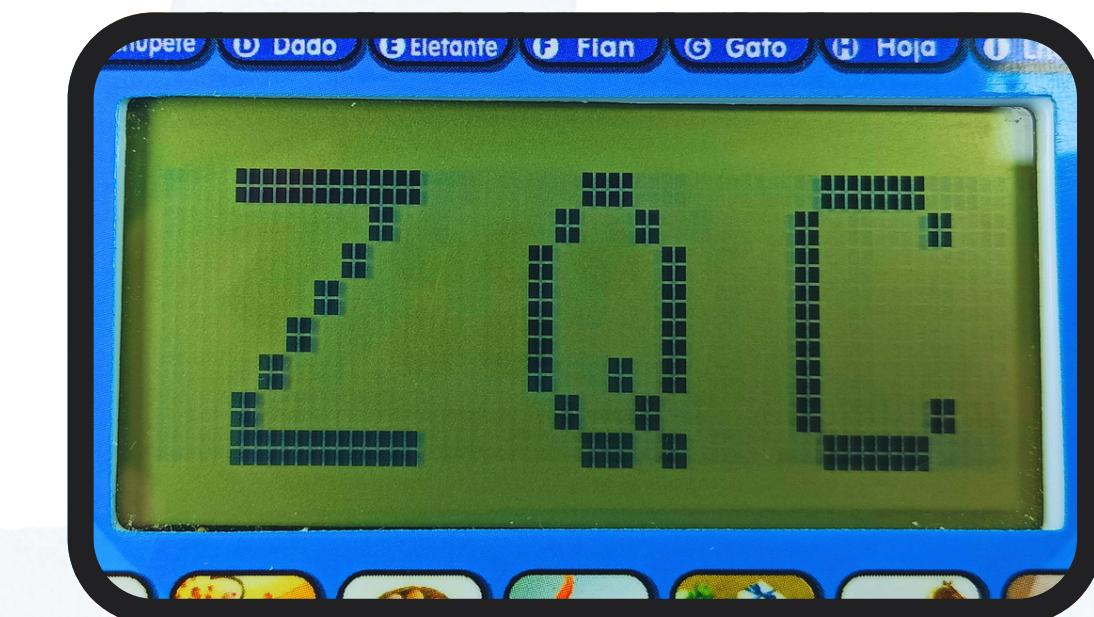


Spelling Quiz Mode

Spell the given word by pressing the correct letters

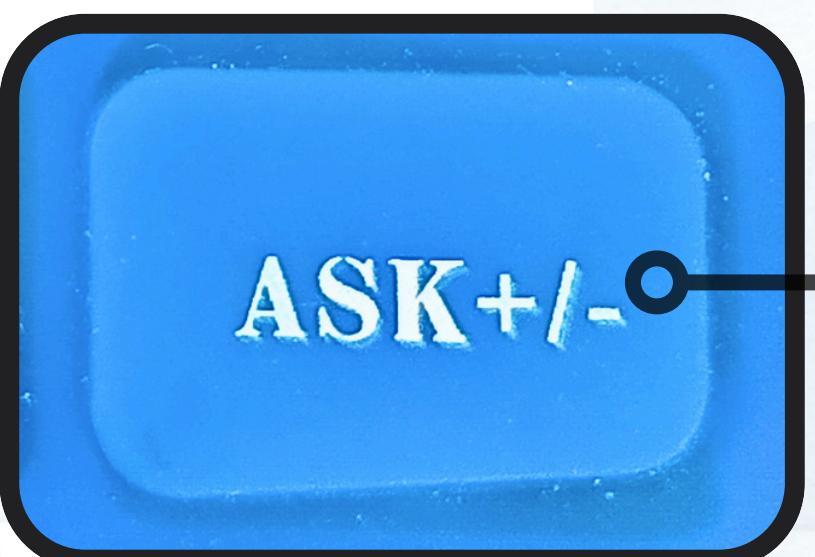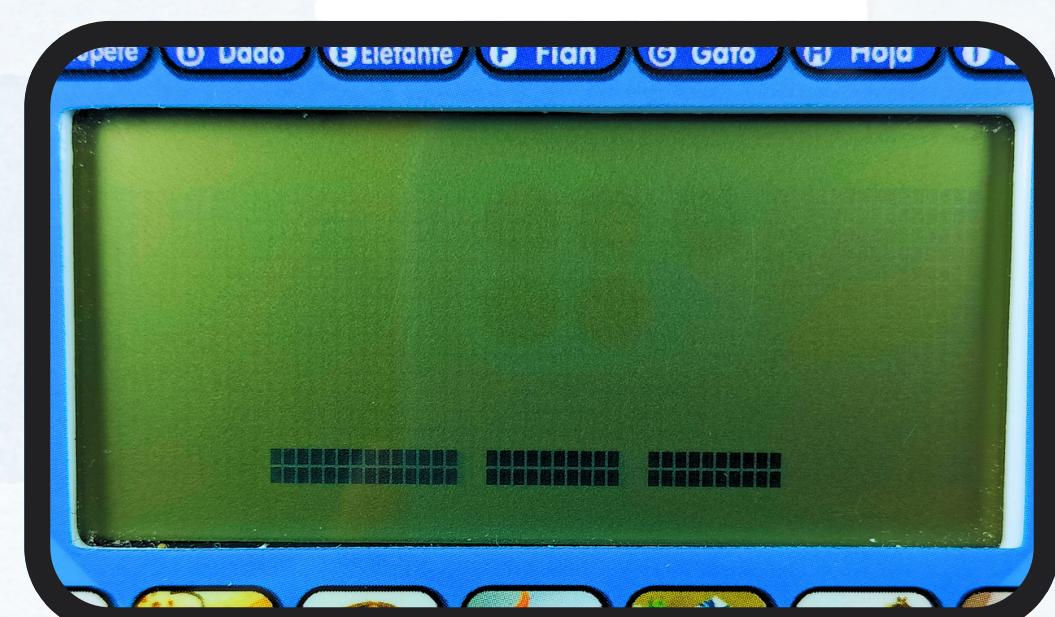

Math Quiz (Ask) Mode

Addition & Subtraction Quiz.
Press the correct number key


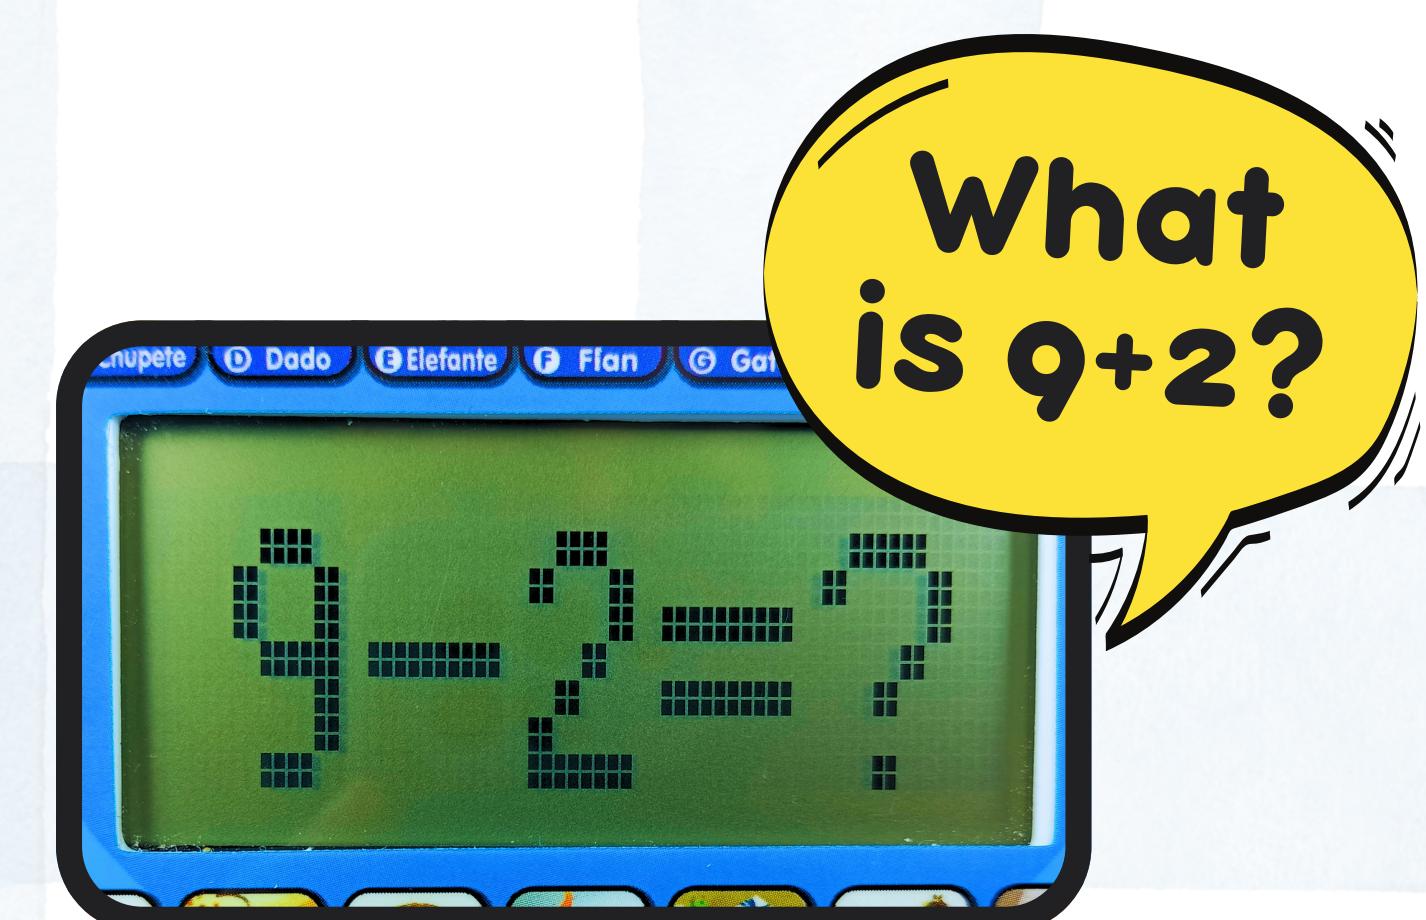


MUSIC MODE

IN SPANISH & ENGLISH NURSERY RHYMES

Music Mode

Play the nursery rhymes
by pressing the letter or
number keys

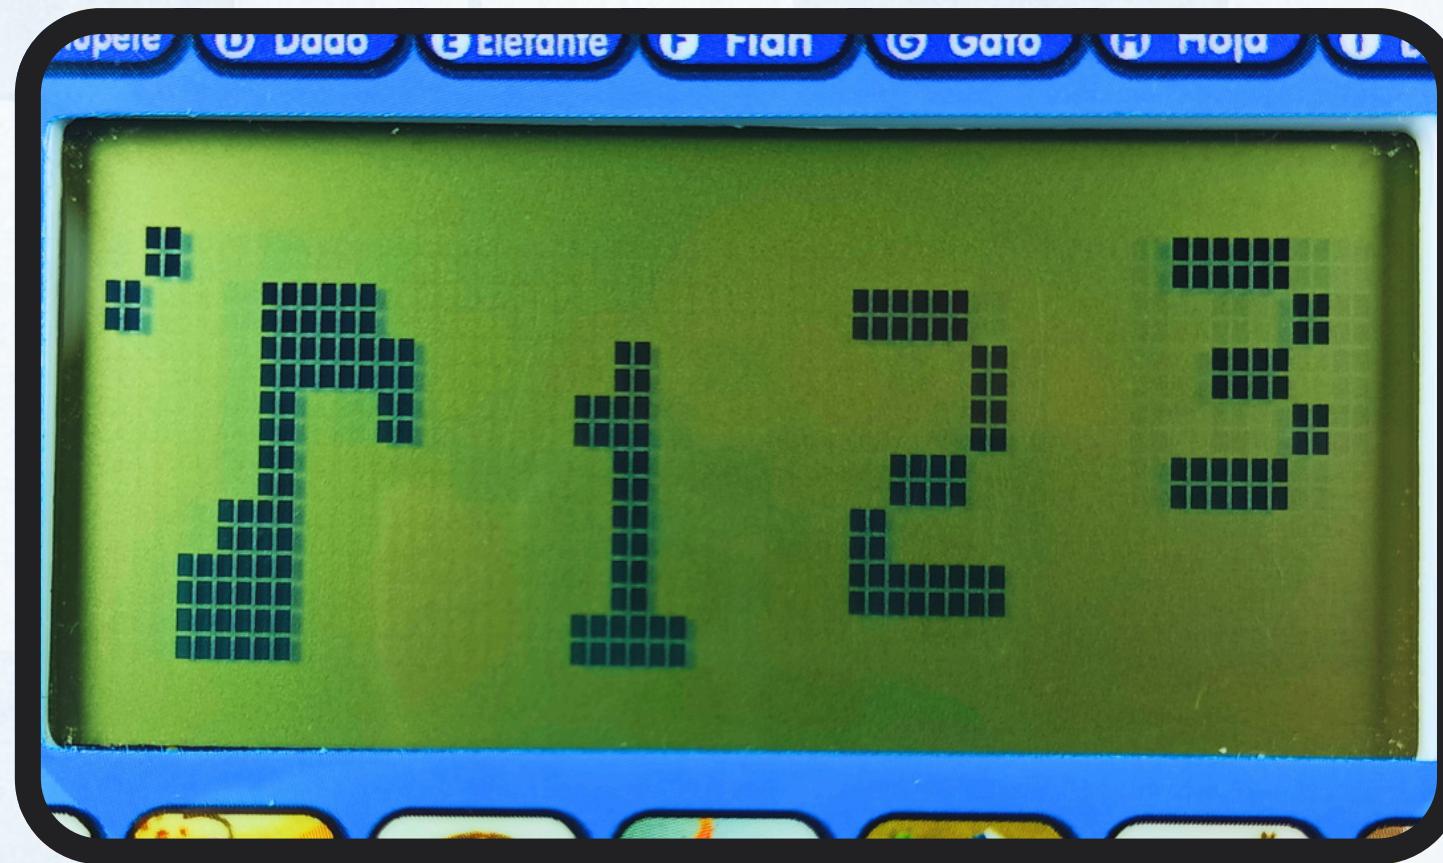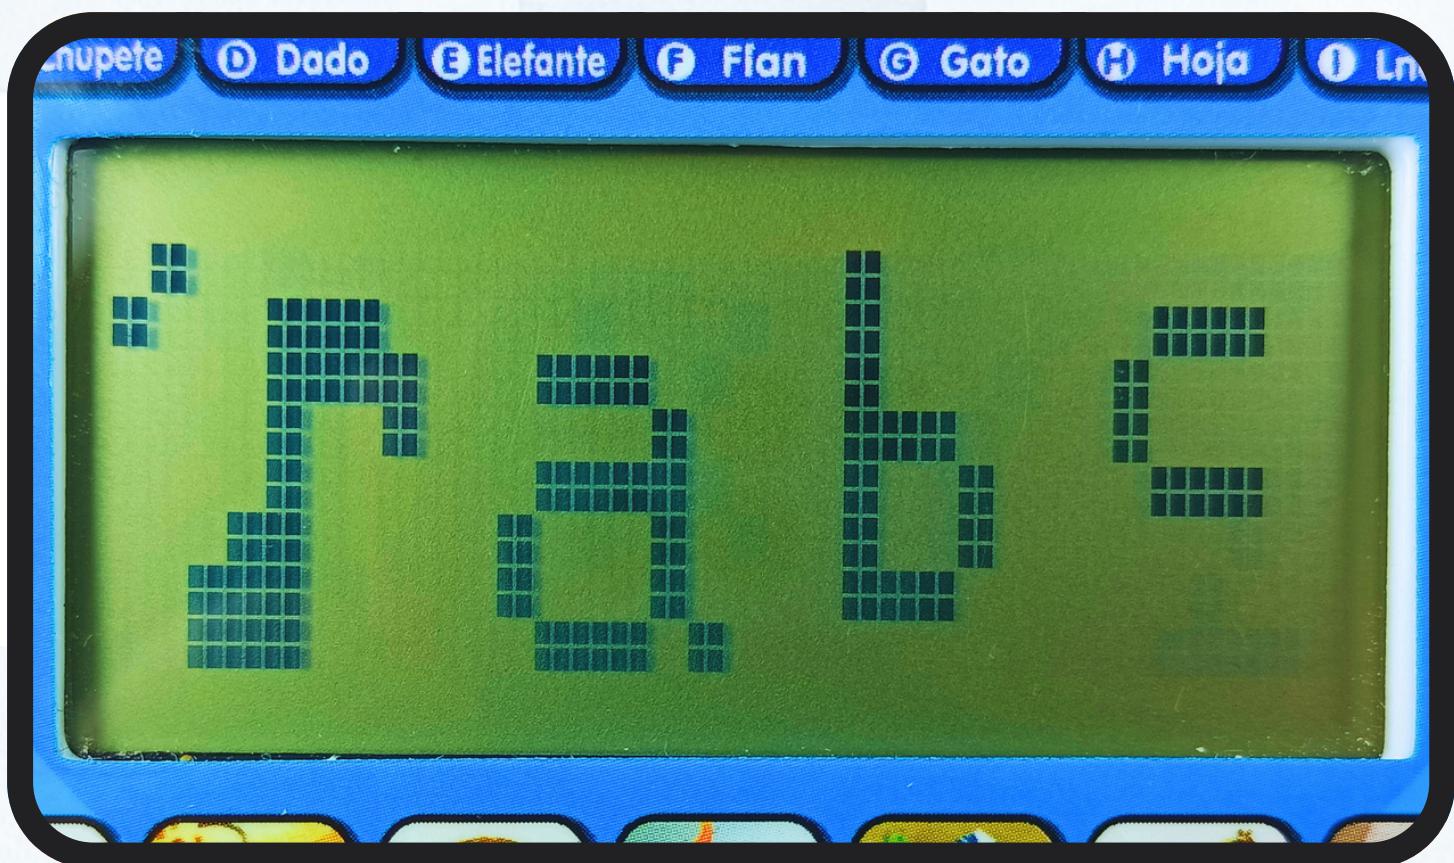

ZeenKind
Toys