



ZeenKind
TOYS

FRENCH & ENGLISH SOUND BOOK

USER GUIDE

www.zeenkind.com

support@zeenkind.com

FEATURES

Reading Mode


Quiz Mode

French/ English
Switch Button

Volume +/-

Power On/ Off

Go Button

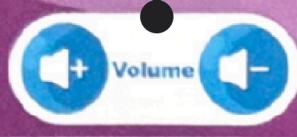

Carré

Square

Rectangle

Rectangle

Cercle

Circle

Triangle

Triangle

Ovale

Oval

Losange

Rhombus

Rouge

Red

Orange

Orange

Jaune

Yellow

Vert

Green

Cyan

Cyan

Bleu

Blue

Appuyez d'abord sur "GO" avant d'apprendre cette page!

Forme & Couleur


HOW TO START



2. Tap **'GO'** on **each page** to start. Otherwise the last sound will just repeat.

! IMPORTANT

2. Firmly press the graphics on the box to hear the audio.

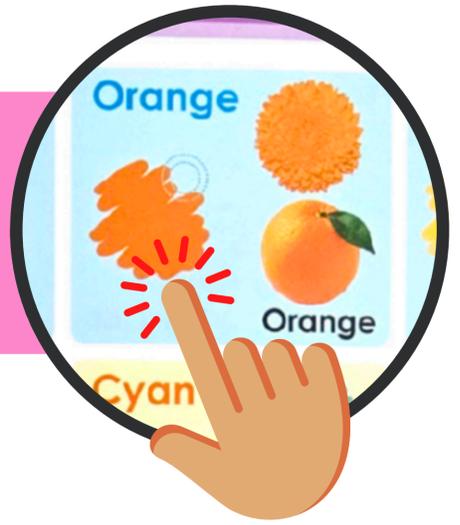

3. Press the language button to switch between French and English.

BATTERY



Requires 3 AAA batteries
(not included).



If the book does not turn on after installing the batteries, slightly lift or adjust the batteries to improve contact.