

ZeenKind
TOYS


FRENCH & ENGLISH SOUND BOOK

USER GUIDE



www.zeenkind.com | support@zeenkind.com

FEATURES

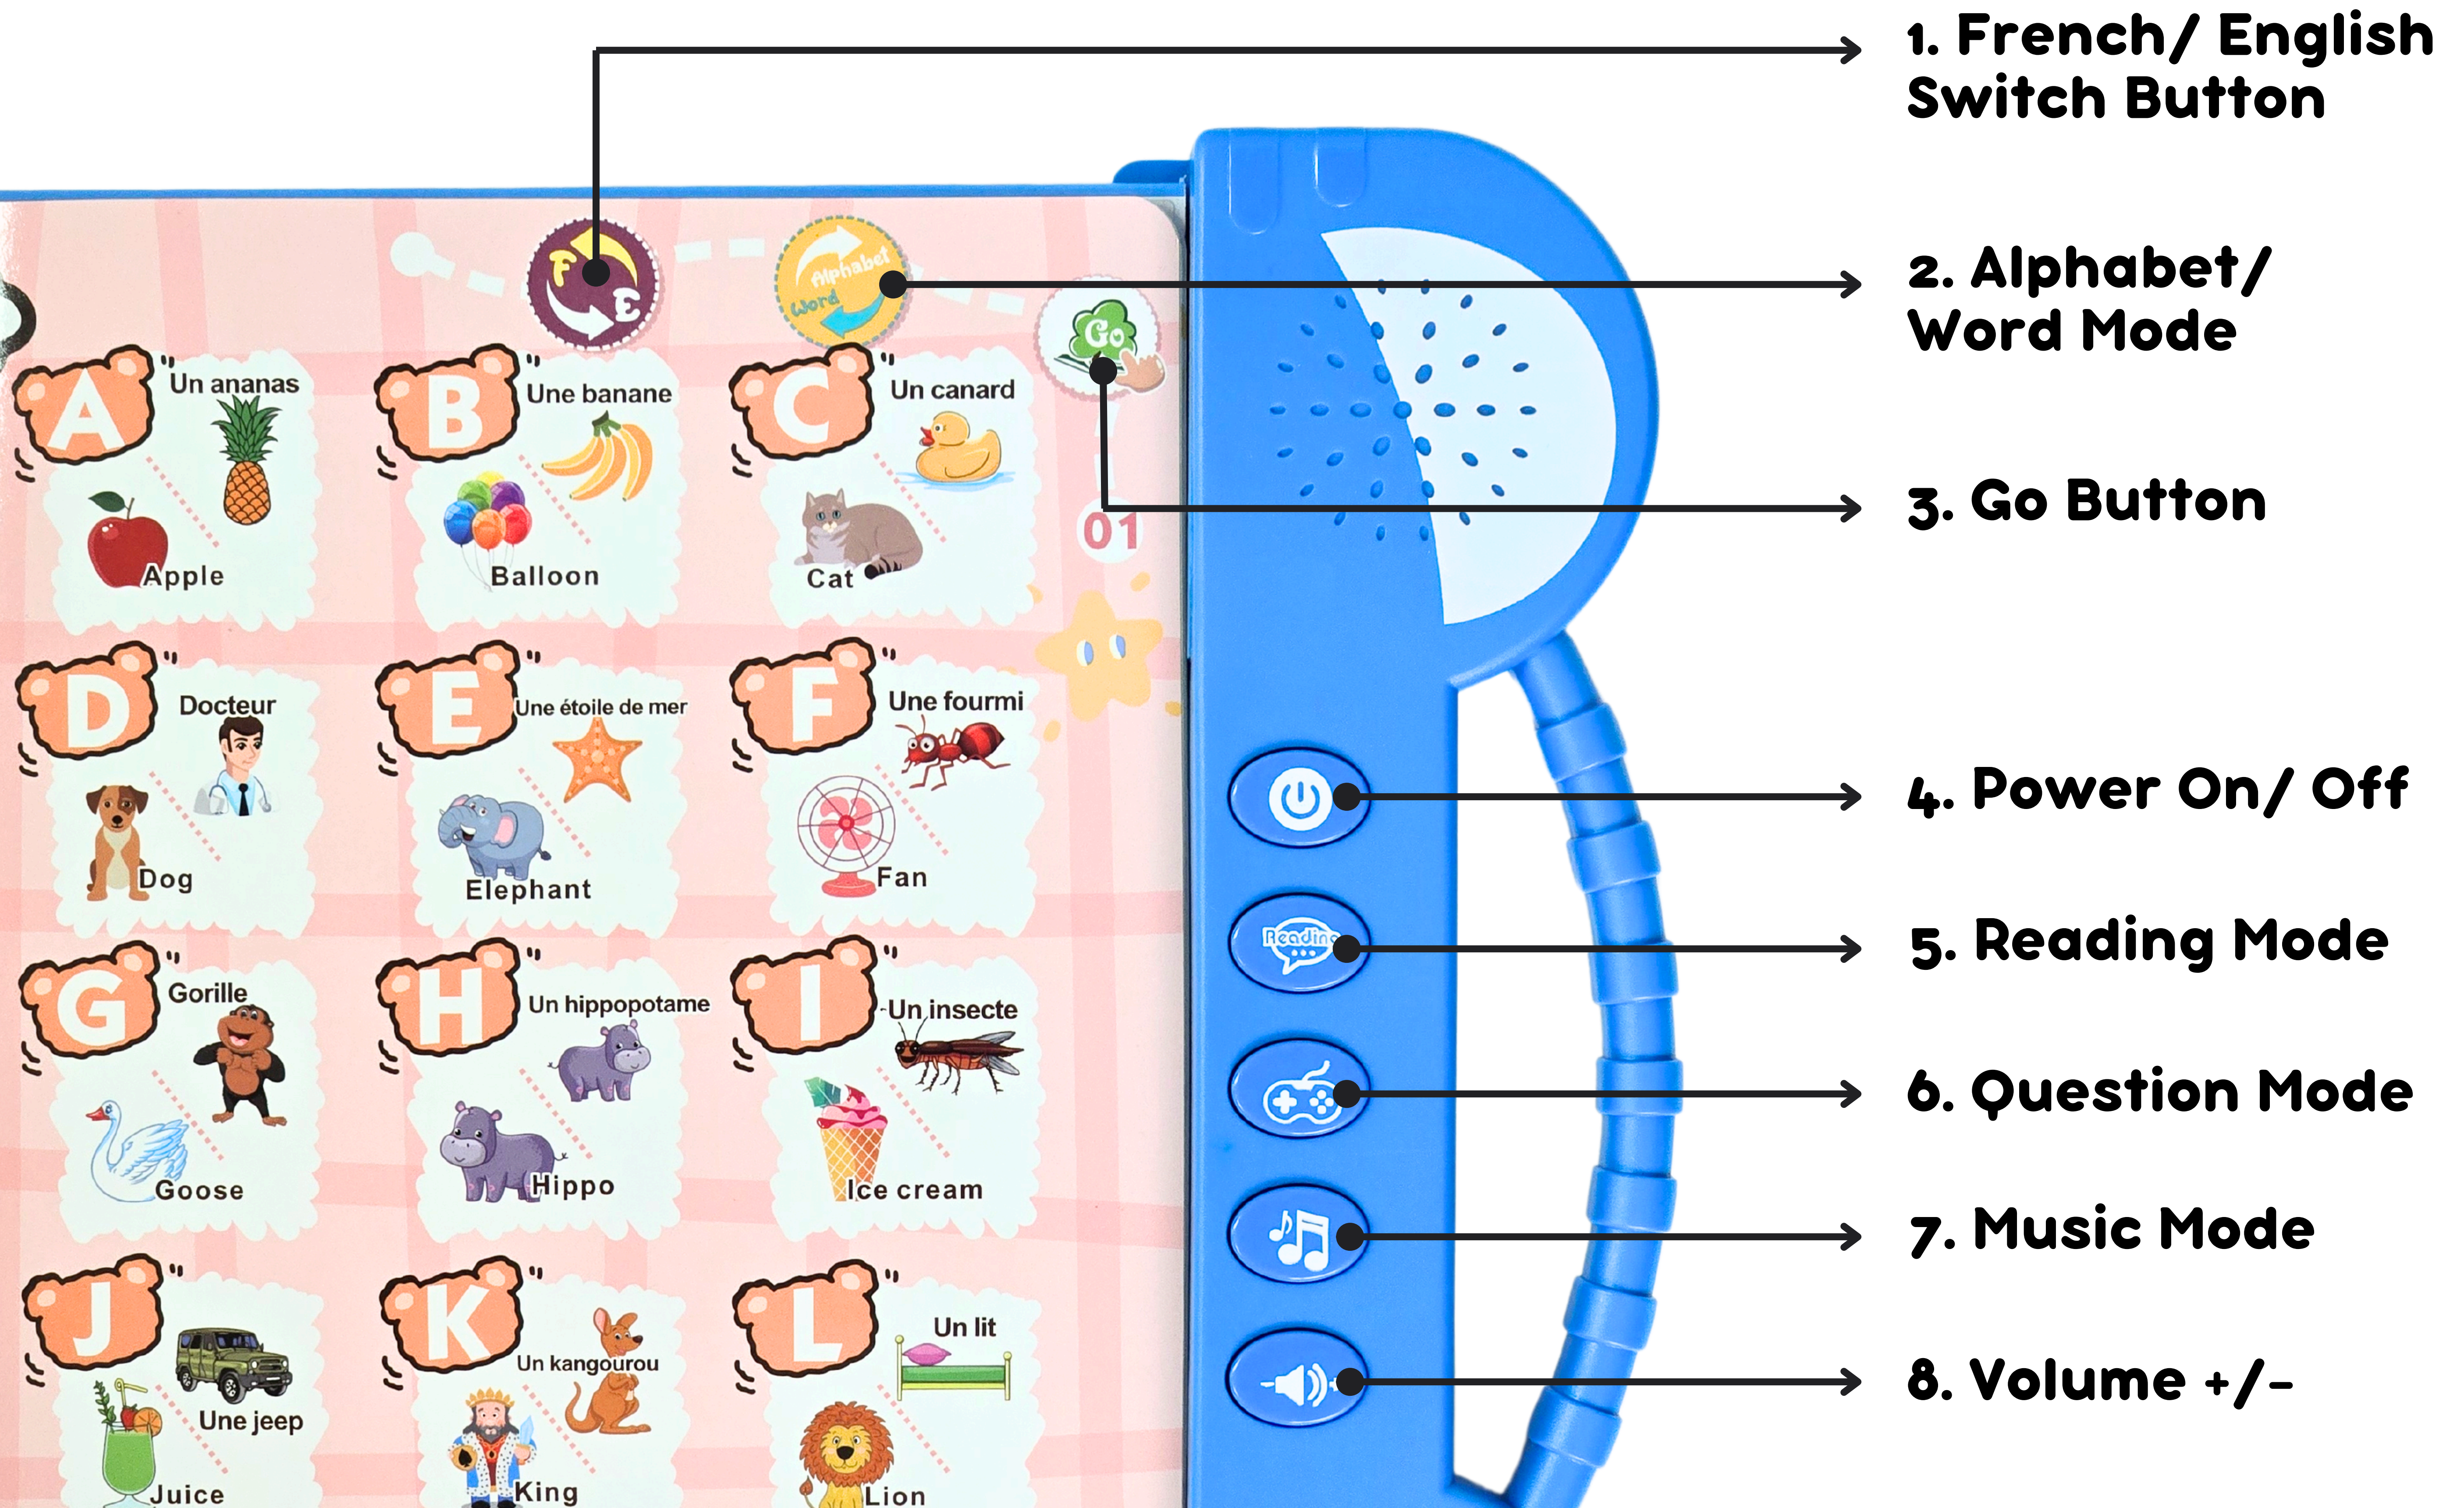


HOW TO START



2. Tap **'GO'** on **each page** to start. Otherwise the last sound will just repeat.


! IMPORTANT

2. Firmly press the graphics on the box to hear the audio.

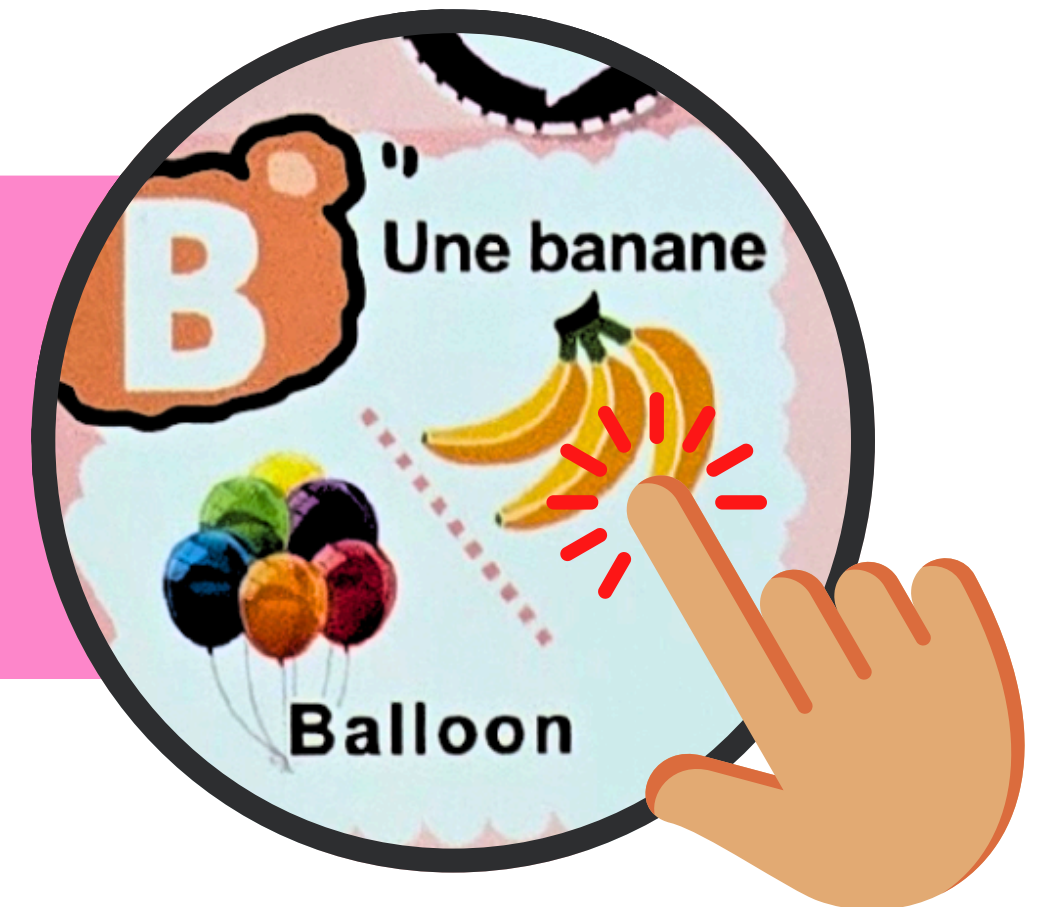

3. Press the language button to switch between French and English.

BATTERY

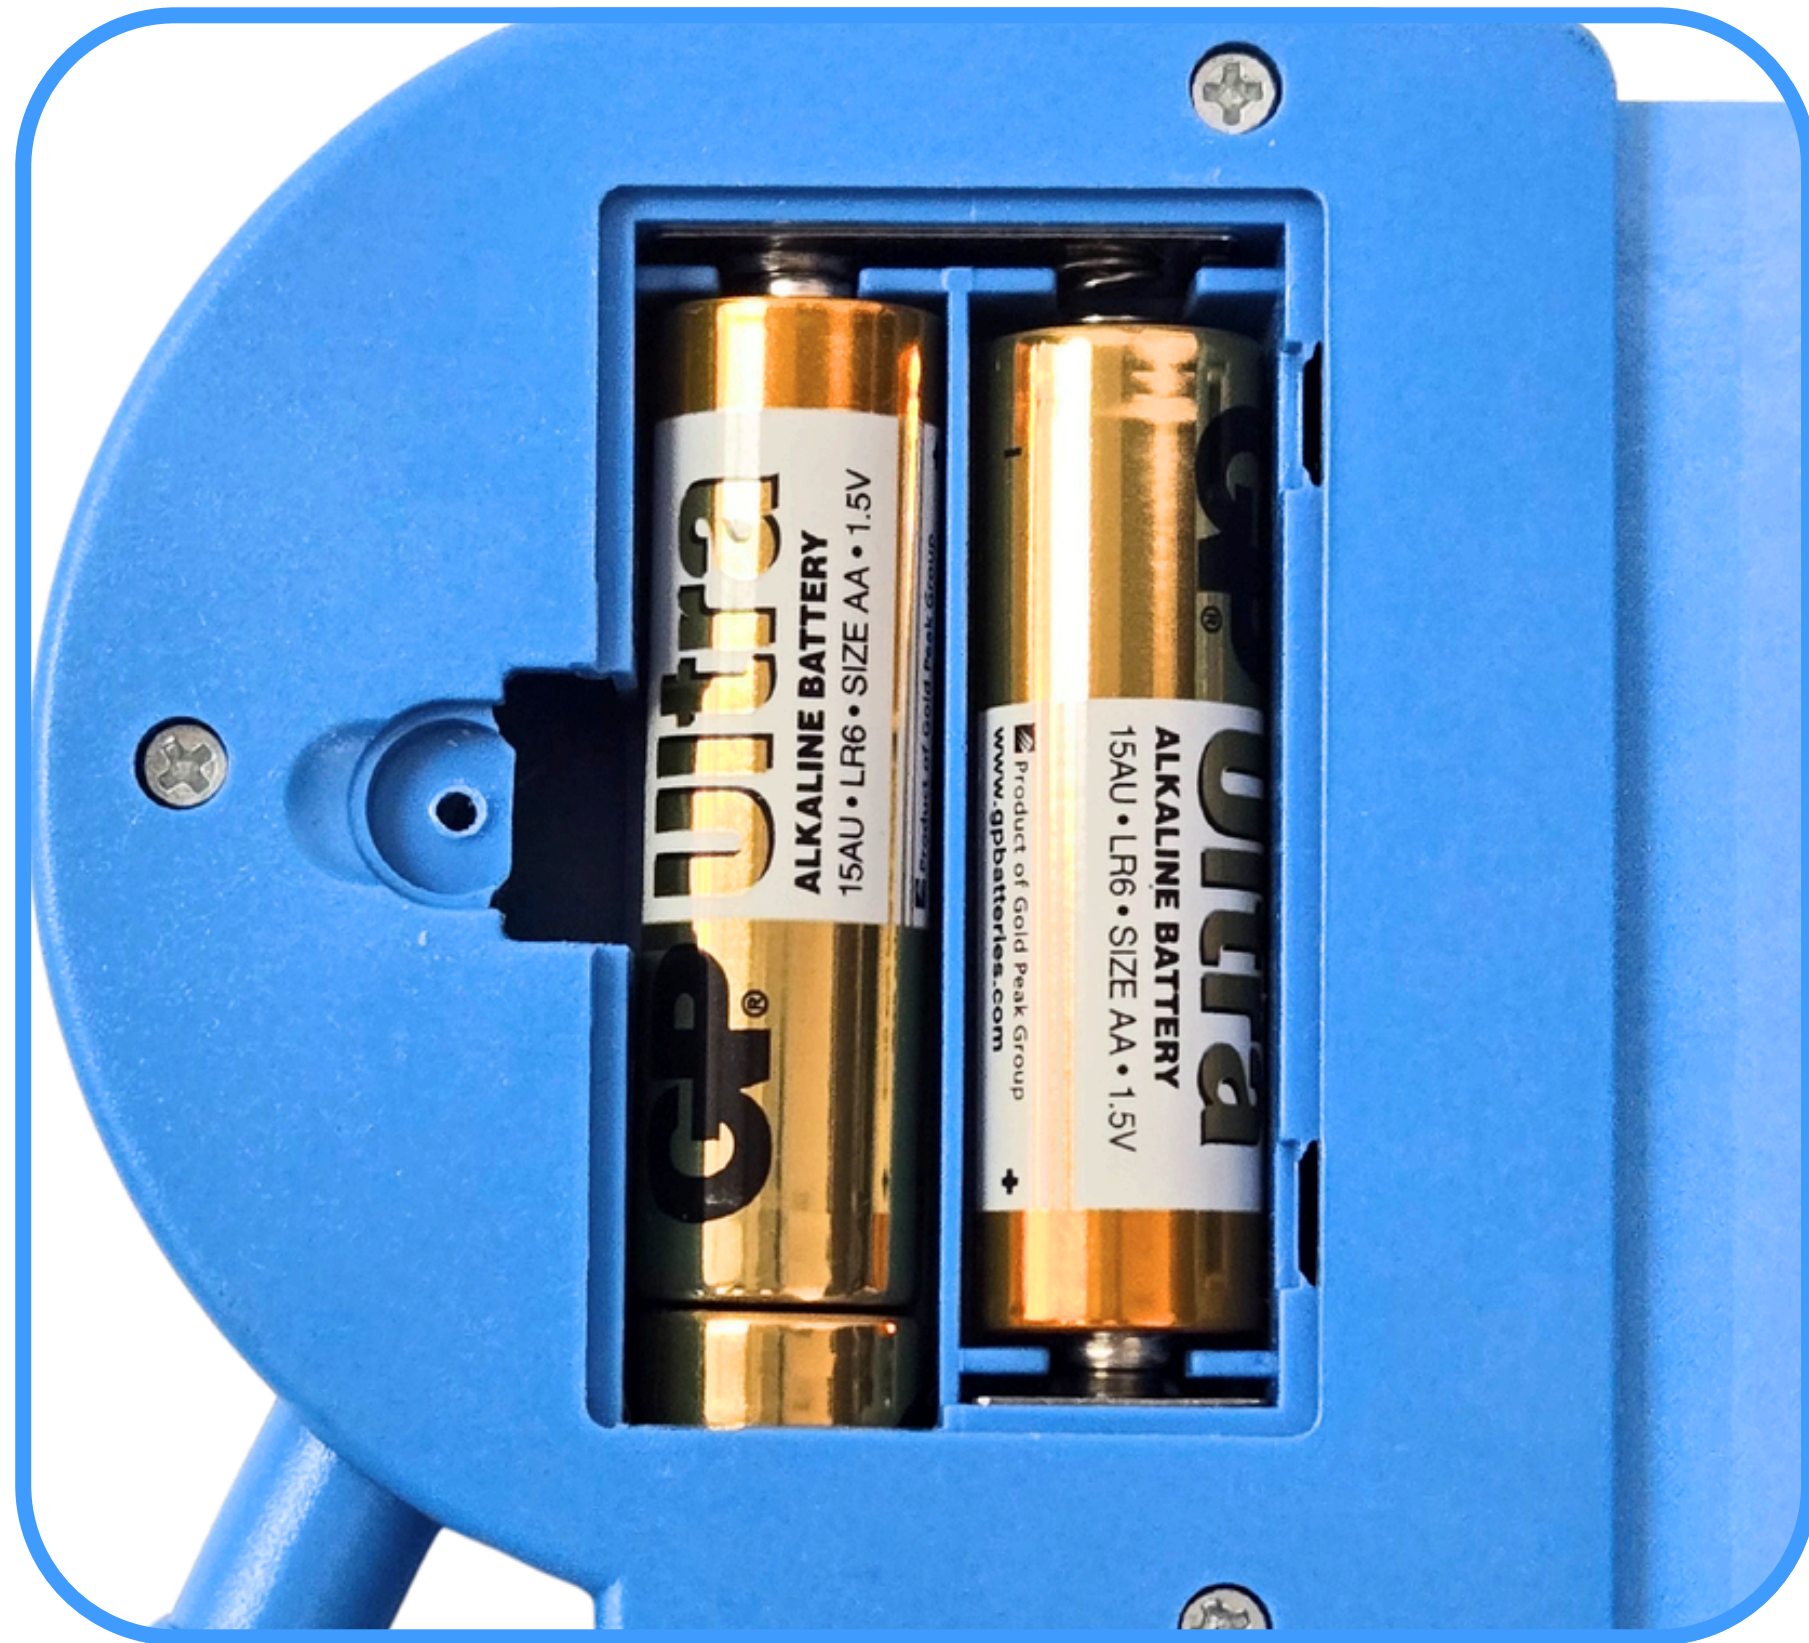

Requires 2 AA batteries
(not included).



If you hear any sound defects or irregularities, it's time to replace the batteries. Fresh batteries ensure the best performance.