

SPANISH & ENGLISH SOUND BOOK

USER GUIDE

ZeenKind
TOYS



BUTTONS

GO

Activate
the Page

MUSIC

Play Music
Tracks

READ

Auto-Reads
all Words on
the Page

QUIZ

Question &
Answer
Mode

VOL

Adjust
Volume +/-

SPANISH



INGLES

Switch
Language to
French/ English

PRESS THIS
FIRST ON
EACH PAGE



GO



20

HOW TO START

1. Switch the button to turn on/ off.

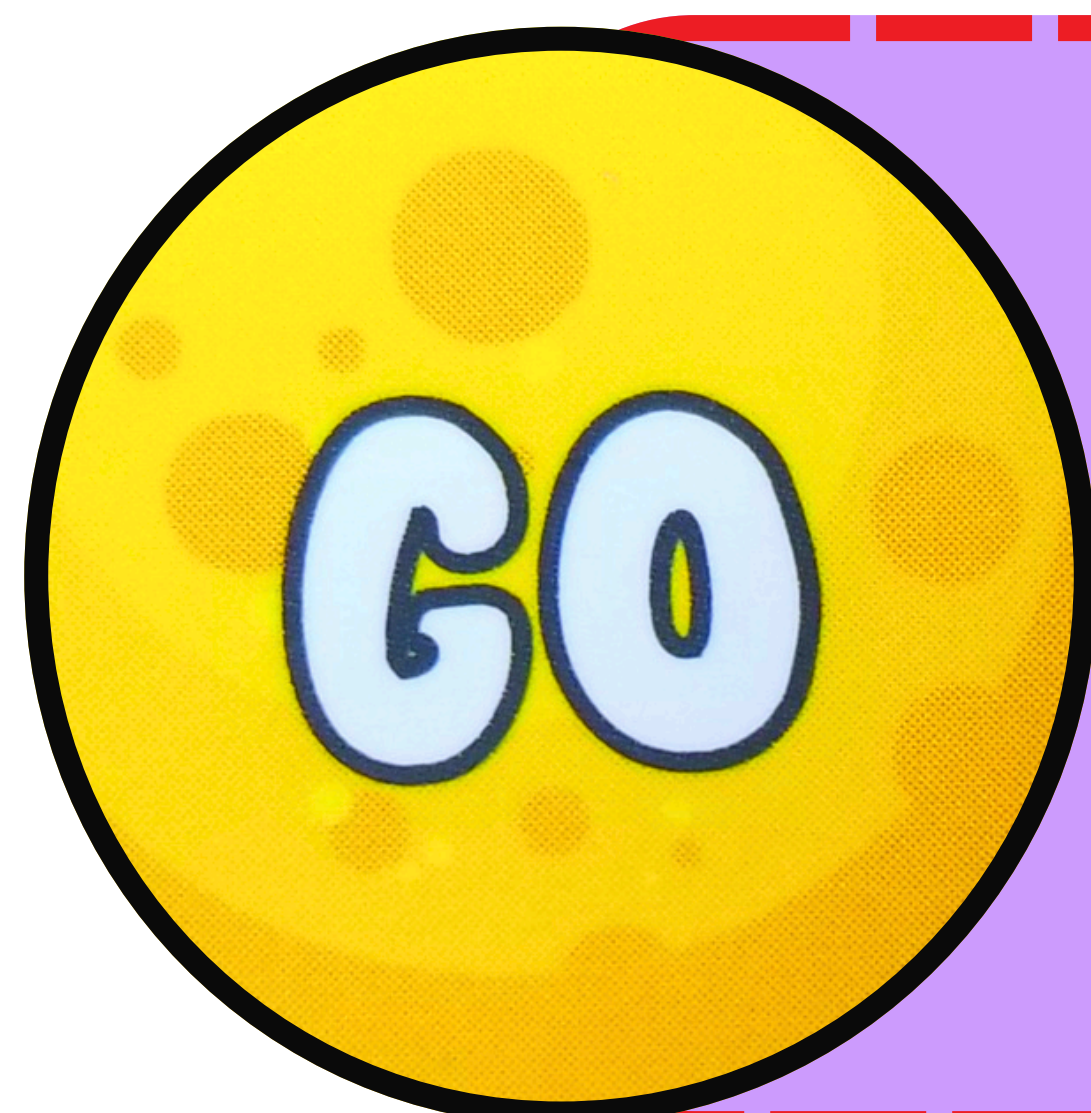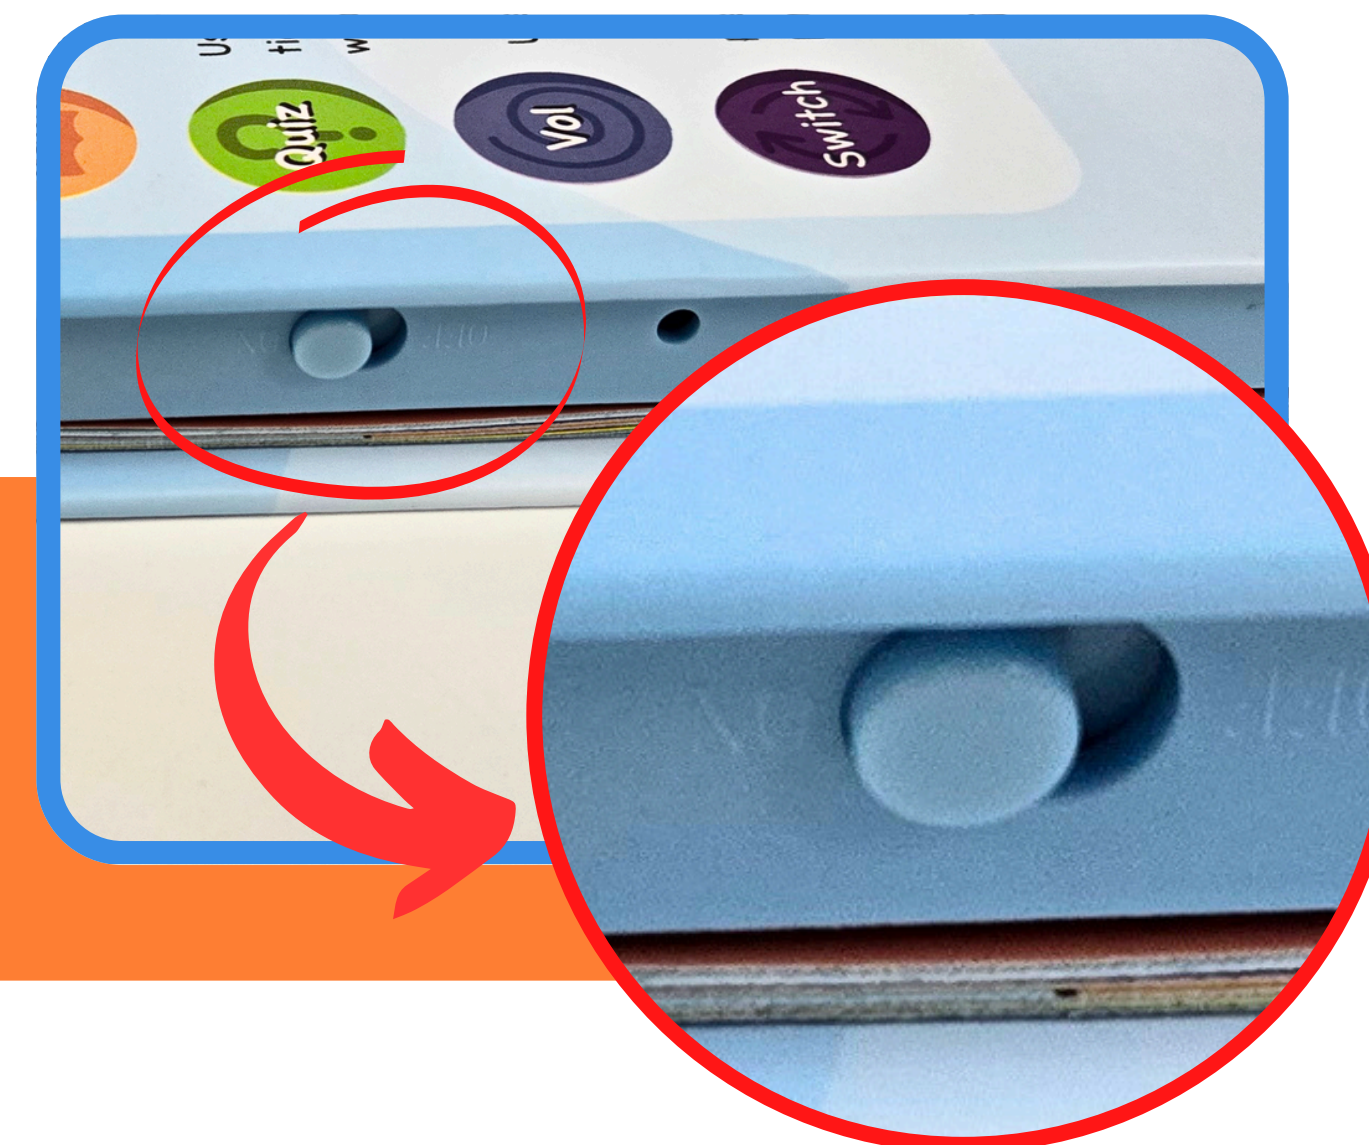

2. Tap **'GO'** on **each page** to start. Otherwise the last sound will just repeat.

! IMPORTANT

2. Firmly press the graphics on the box to hear the audio.



3. Press the language button to switch between Spanish and English.

BATTERY



Requires 3 AAA
batteries (not included).



Replace the batteries if you hear any
sound defects. Fresh batteries ensure the
best performance.